


Published : Mar 3, 2004

Hood Switch (86.77.20)

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Release the RH hood latch.
 - Remove the 2 Torx bolts.
 - Disconnect the electrical connector.

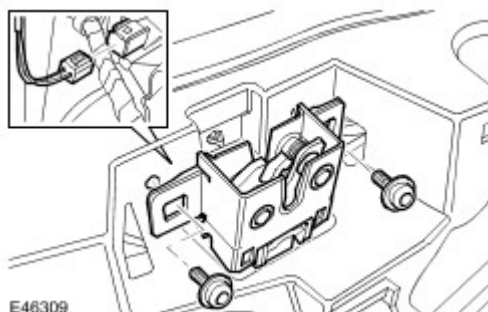

- 3 . Remove the hood switch.

Installation

- 1 . Install the hood switch.
- 2 . Install the RH hood latch.
 - Connect the electrical connector.
 - Tighten the Torx bolts to 10 Nm (7 lb.ft).
- 3 . Open and close the hood to check the hood latch operation.
- 4 . Adjust the hood latch.
 - Loosen the 2 hood latch Torx bolts.
 - Lower the hood and check for alignment.
 - Open the hood and tighten the Torx bolts to 10 Nm (7 lb.ft).
 - Check for the correct operation of the hood safety catch.
 - If necessary, repeat the above adjustment procedure.