


## Engine Undershield (76.10.50)

### Removal


1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2.  **CAUTION:** Note the special washer.

Remove the engine undershield.

➤ Remove the 10 bolts.

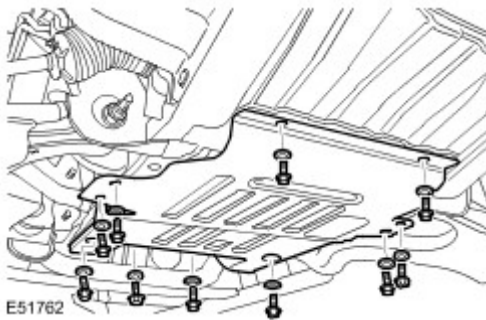

### Installation

1. To install, reverse the removal procedure.  
➤ Tighten the bolts to 62 Nm (46 lb.ft).