


Fender (76.10.24)

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the plenum chamber panel. For additional information, refer to [Plenum Chamber \(80.15.62\)](#) (Section 412-01)
- 3 . Remove the headlamp assembly. For additional information, refer to [Headlamp Assembly \(86.40.49\)](#) (Section 417-01)
- 4 . Remove the fender splash shield. For additional information, refer to [Fender Splash Shield \(76.10.48\)](#) (Section 501-02)
- 5 . Remove the fender moulding. For additional information, refer to [Fender Moulding \(76.43.54\)](#) (Section 501-08)
- 6 . Remove the fender lower moulding.


➤ Release the 4 clips.

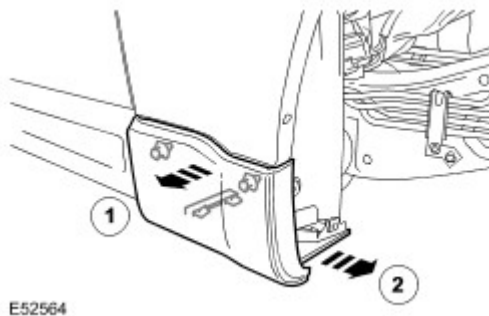

- 7 . Remove the fender air intake grille.


➤ Release the 4 clips.

➤ Remove the air ducting.

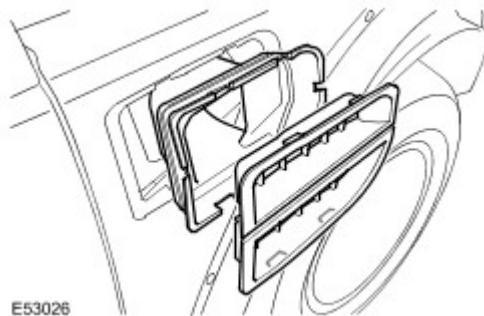

- 8 . Remove the front fender.

➤ Remove the 6 Torx bolts.

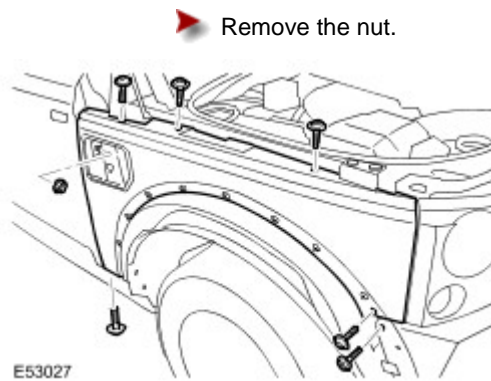

9. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the fender rear trim.

▶ Remove the 3 clips.



Installation

1. Install the fender rear trim.
▶ Secure in the 3 clips.
2. Install the front fender.
▶ Install the bolts and tighten to 10 Nm (7 lb.ft).
▶ Install the nut and tighten to 10 Nm (7 lb.ft)
3. Install the fender air intake grille.
▶ Install the air ducting.
4. Install the lower fender moulding.
▶ Secure in the clips.
5. Install the fender moulding. For additional information, refer to [Fender Moulding \(76.43.54\)](#) (Section 501-08)
6. Install the fender splash shield. For additional information, refer to [Fender Splash Shield \(76.10.48\)](#) (Section 501-02)

- 7 . Install the headlamp assembly. For additional information, refer to [Headlamp Assembly \(86.40.49\)](#) (Section 417-01)
- 8 . Install the plenum chamber panel. For additional information, refer to [Plenum Chamber \(80.15.62\)](#) (Section 412-01)
- 9 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)