


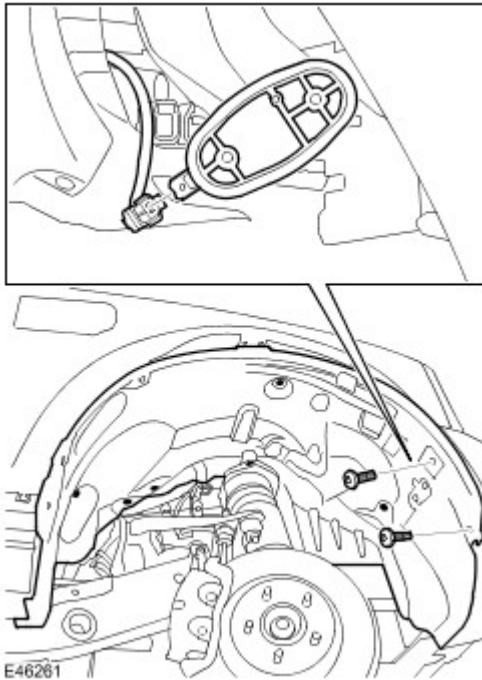
Fender Splash Shield (76.10.48)

Removal


1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Remove the fender moulding. For additional information, refer to [Fender Moulding \(76.43.54\)](#) (Section 501-08)
3. Remove the fender splash shield.
 - Remove the 2 screws.
 - Remove the 6 retainers.
 - Disconnect the electrical connector.



4. **NOTE :**
 - Do not disassemble further if the component is removed for access only.
 - Remove the tire pressure antenna.
 - Remove the 2 retainers.

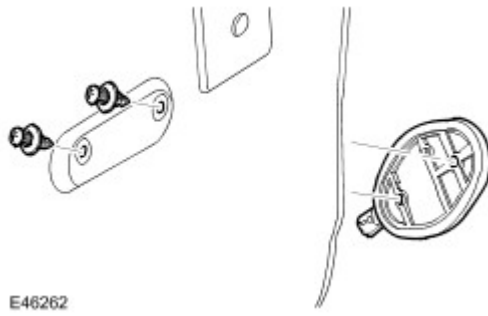

Installation

- 1 . Install the tire pressure antenna.
 - ▶ Install the retainers.
- 2 . Install the fender splash shield.
 - ▶ Connect the electrical connector.
 - ▶ Install the retainers.
 - ▶ Install the screws.
- 3 . Install the fender moulding. For additional information, refer to [Fender Moulding \(76.43.54\)](#) (Section 501-08)