


Published : Jun 14, 2004


Fuel Filler Interlock Catch (19.55.17)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the C-pillar lower trim panel. For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)
3. Remove the fuel filler interlock catch assembly.
 - Remove the clip.
 - Release the cable.
 - Disconnect the electrical connector.

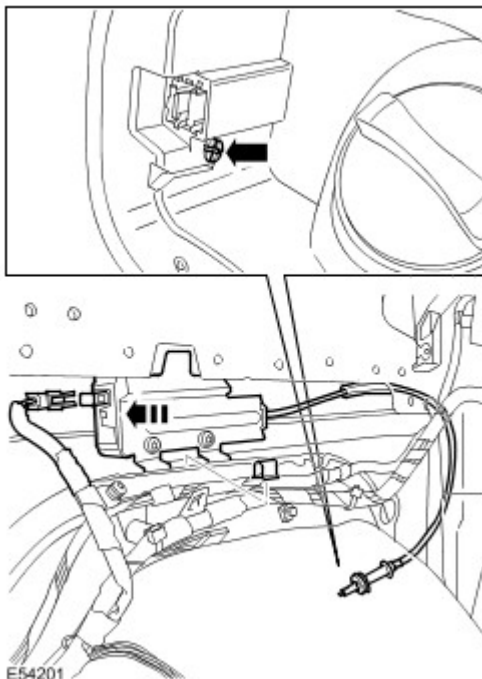

4. Remove the solenoid.
 - Remove the 2 Torx screws.
 - Release the cable.

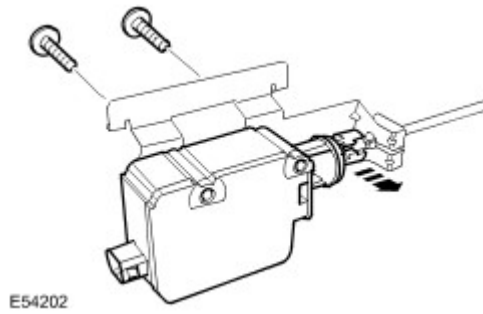


5 .

NOTE :

Do not disassemble further if the component is removed for access only.
Release and remove the cable.

➤ Release the clip.

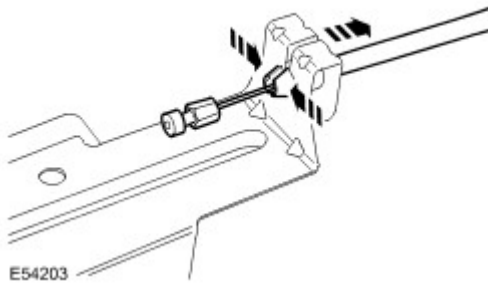**Installation**

1 .

Install the cable.

➤ Secure the clip.

2 .

Install the solenoid.

➤ Attach the cable.

➤ Install the Torx screws.

3 .

Install the fuel filler flap latch assembly.

➤ Connect and secure the electrical connector.

➤ Carefully secure the clips.

4 .

Install the C-pillar lower trim panel. For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)

5 .

Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)