


Published : Jul 16, 2004

Liftgate Alignment (76.28.31)


1 . With the liftgate closed, check the alignment of the liftgate to roof panel. The liftgate should be central in its aperture. Profile of the liftgate to roof panel should be 2 mm below flush.

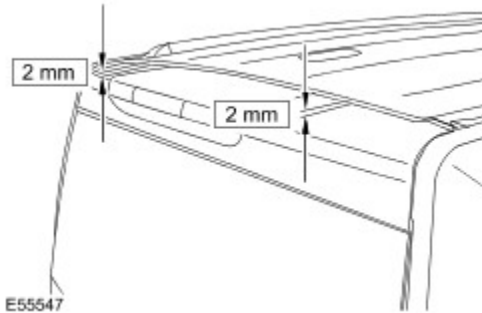


- 2 . Remove the rear headliner trim panel.
- Release the 7 clips.
 - Disconnect the electrical connector.



- 3 . Loosen, but do not remove both liftgate hinge to body bolts.

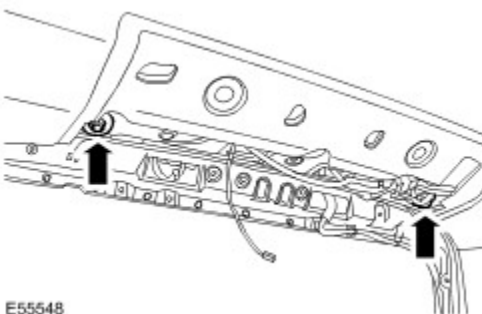

- 4 . Position the liftgate central to the aperture.
- 5 . Remove the LH liftgate to body bolt.

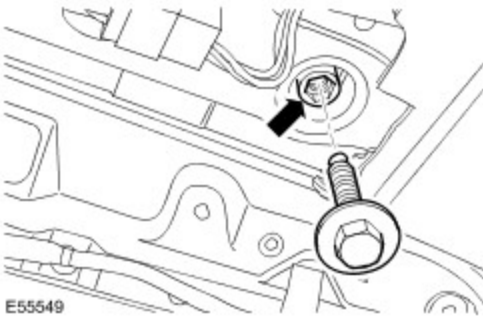

6 .



CAUTION: When setting the liftgate profile, make sure that the liftgate hinge NOT being adjusted has its retaining bolt fitted.

NOTE :

Turning the Allen key clockwise will raise the liftgate.

Using a 13 mm Allen key, adjust the LH liftgate hinge until a profile of 2 mm below flush to the roof panel is achieved.

- Install the bolt and tighten to 40 Nm (30 lb.ft).

7 . Repeat the above procedure for the RH liftgate hinge.

8 . Check for correct operation of the liftgate, and if necessary adjust the liftgate and tailgate strikers.

9 . Install the rear headliner trim panel.

- Connect the electrical connector.
- Secure with the clips.