



Liftgate (76.28.29)

Removal

- 1 . Open the liftgate and tailgate.
- 2 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 3 . Remove the liftgate upper trim panel.
 - Release the 4 clips.

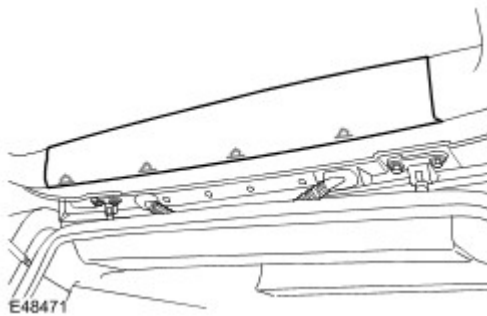


- 4 . Remove the liftgate side trim panel.
 - Release the 5 clips.
 - Repeat the above procedure for the other side.

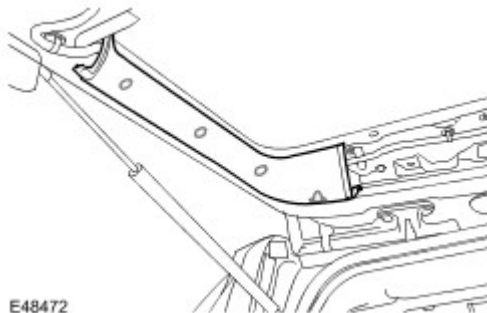


- 5 . Remove the rear headliner trim panel.
 - Release the 7 clips.
 - Disconnect the electrical connector.



6. Disconnect the washer jet hose.
 - Release the grommet.
7. Release the liftgate wiring harness.
 - Disconnect the 2 electrical connectors.
 - Release the grommet.

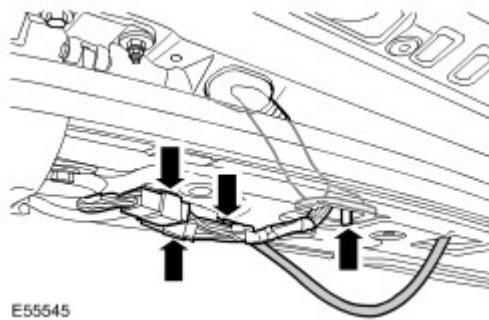

8. With assistance, remove the liftgate assembly.
 - Release the clips and disconnect the struts.
 - Remove the 2 bolts.

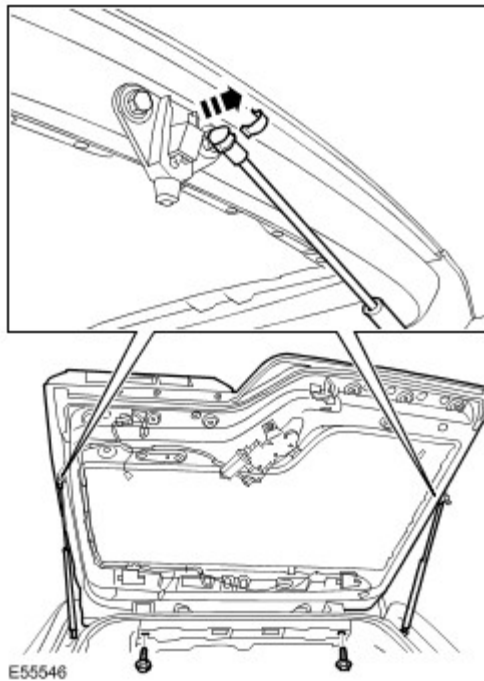

Installation

- 1 . With assistance, install the liftgate assembly.
 - Tighten the bolts to 40 Nm (30 lb.ft).
 - Connect the struts and secure with the clips.
- 2 . Attach the liftgate wiring harness.
 - Install the grommet.
 - Connect the electrical connectors.
- 3 . Connect the washer jet hose.
 - Install the grommet.
- 4 . Install the liftgate side trim panel.
 - Secure with the clips.
 - Repeat the above procedure for the other side.
- 5 . Install the liftgate upper trim panel.
 - Secure with the clips.
- 6 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 7 . Check and adjust the liftgate to roof panel profile. For additional information, refer to [Liftgate Alignment \(76.28.31\)](#) (Section 501-03)