

Published : Mar 4, 2004


## B-Pillar Lower Trim Panel (76.13.29)

### Removal

- 1 . Remove the B-pillar lower trim panel.
  - Release weatherstrip from both sides of the B-pillar lower trim panel.
  - Release the 4 clips.



- 2 . **NOTE :**  
Do not disassemble further if the component is removed for access only.  
Remove 4 clips from the B-pillar lower trim panel.

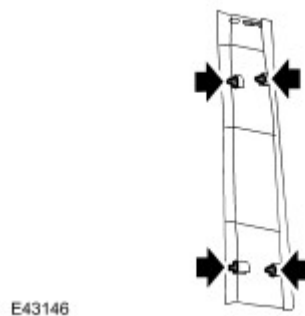

### Installation

- 1 . To install, reverse the removal procedure.