


Published : Apr 28, 2004

B-Pillar Upper Trim Panel (76.13.28)

Removal

1. Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
2. Remove the B-pillar lower trim panel. For additional information, refer to [B-Pillar Lower Trim Panel \(76.13.29\)](#) (Section 501-05)
3. Release the safety belt lower anchor from the seat.
 - Remove the bolt cover.
 - Passenger side, disconnect the electrical connector.
 - Remove the Torx bolt.

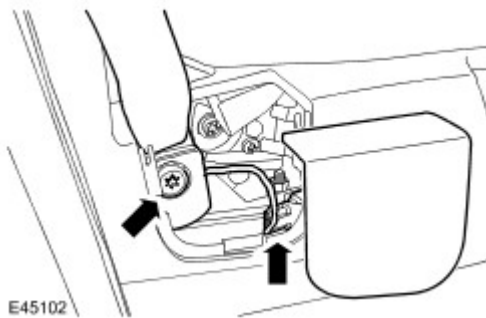

4. **NOTE :**
Make sure the seat belt height adjuster is at its lowest point prior to removal of the B-pillar upper trim panel.
Remove the B-pillar upper trim panel.
 - Release the front and rear door weatherstrips for access.
 - Release the 2 lower clips, then the remaining upper clip.
 - Release the safety belt.



Installation

1. Install the B-pillar upper trim panel.

- ▶ Secure with the clips.
- ▶ Attach the safety belt.
- ▶ Attach the door weatherstrips.

2 . Attach the safety belt lower anchor to the seat.

- ▶ Tighten the Torx bolt to 40 Nm (30 lb.ft).
- ▶ Passenger side, connect the electrical connector.
- ▶ Install the bolt cover.

3 . Install the B-pillar lower trim panel. For additional information, refer to [B-Pillar Lower Trim Panel \(76.13.29\)](#) (Section 501-05)