



Cowl Side Trim Panel (76.13.27)

Removal

1. Remove the front scuff plate trim panel. For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#) (Section 501-05)
2. Driver side: Remove the footrest trim panel bolt.
 - Remove the cover.

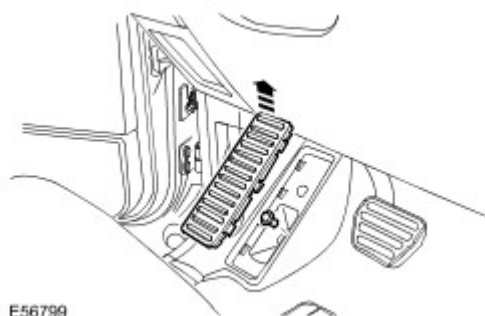

3. Remove the cowl side trim panel.
 - Driver side: Release the hood release lever.
 - Release from the 2 clips.

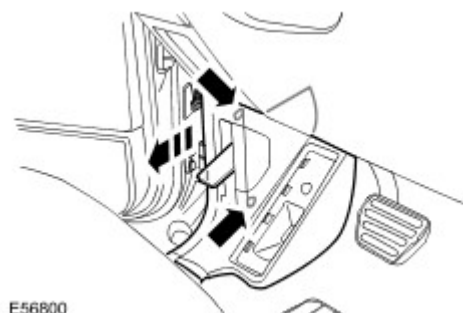

Installation

1. Install the cowl side trim panel.
 - Align the hood release lever.
 - Secure with the clips.
2. Driver side: Tighten the footrest trim panel bolt to 5 Nm (4 lb.ft).
 - Install the cover.
3. Install the front scuff plate trim panel. For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#) (Section 501-05)