

Headliner (76.64.15)


Removal

1. Remove both A-pillar upper trim panels. For additional information, refer to [A-Pillar Trim Panel \(76.13.26\)](#) (Section 501-05)
2. Remove both B-pillar upper trim panels. For additional information, refer to [B-Pillar Upper Trim Panel \(76.13.28\)](#) (Section 501-05)
3. Remove both C-pillar upper trim panels. For additional information, refer to [C-Pillar Upper Trim Panel \(76.13.35\)](#) (Section 501-05)
4. Remove both D-pillar upper trim panels. For additional information, refer to [D-Pillar Trim Panel \(76.13.30\)](#) (Section 501-05)
5. Remove the front overhead console.
 - ▶ Carefully release the 7 clips.
 - ▶ Disconnect the 3 electrical connectors.




E50142


6. Remove the rear overhead console.
 - ▶ Carefully release the 9 clips.
 - ▶ Disconnect the 2 electrical connectors.

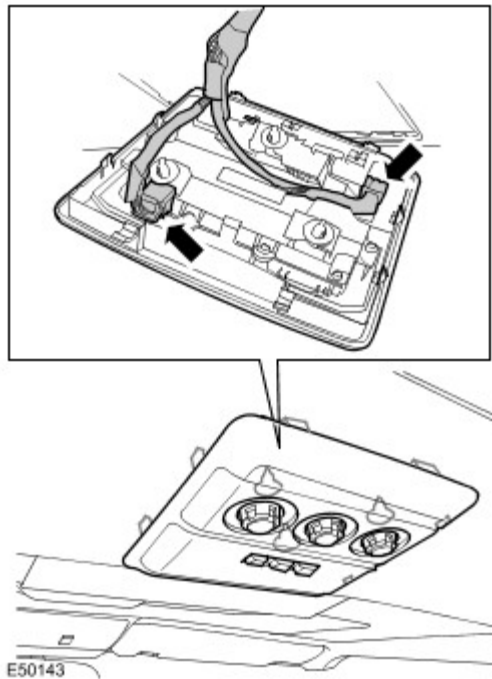

- 7 . Disconnect the RH A-pillar electrical connector.

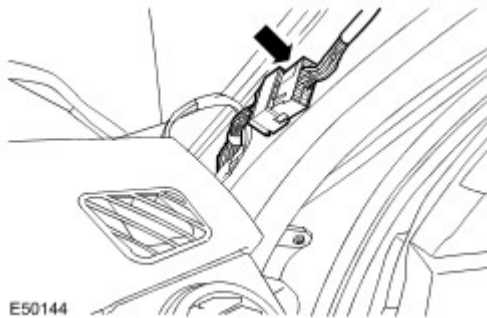


- 8 . Remove the sun visor.
- Remove the cover.
 - Remove the 2 screws.
 - Release from the clip.
 - Disconnect the electrical connector.
 - Repeat the above procedure for the other side.

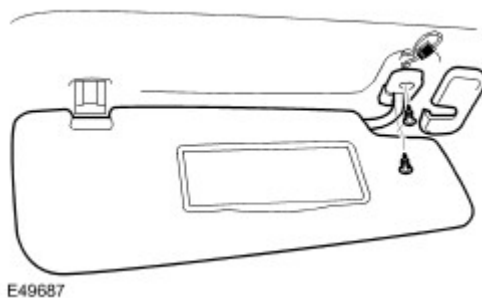

- 9 . Remove the sun visor retaining clip.
- Release the screw cover.
 - Remove the screw.
 - Repeat the above procedure for the other side.



- 10 . Remove the passenger assist handle.
- Release the 2 screw covers.
 - Remove the 2 screws.
 - Repeat the above procedure for the remaining 5 handles.

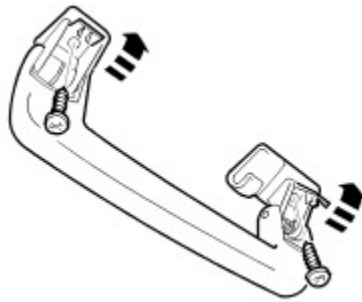

- 11 . Position the front seats fully forward.
- 12 . Position the rear seats fully forward.
- 13 . Remove the rear headliner trim panel.
- Release the 7 clips.
 - Disconnect the electrical connector.




- 14 . Disconnect the headliner wiring harness rear electrical connector.



- 15 . With assistance, carefully remove the headliner.

▶ Release the 14 clips.

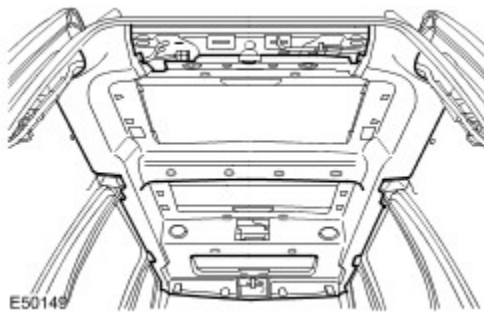


- 16 . **NOTE :**


Do not disassemble further if the component is removed for access only.

Remove the rear interior lamp.

- ▶ Release the clip.
- ▶ Disconnect the electrical connector.
- ▶ Repeat the above procedure for the other side.

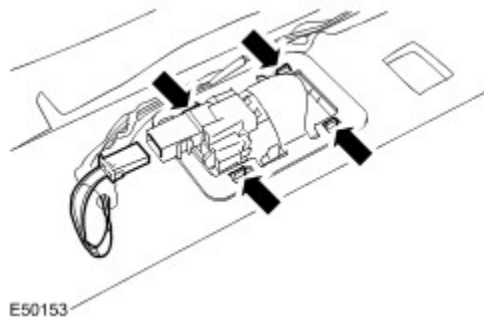



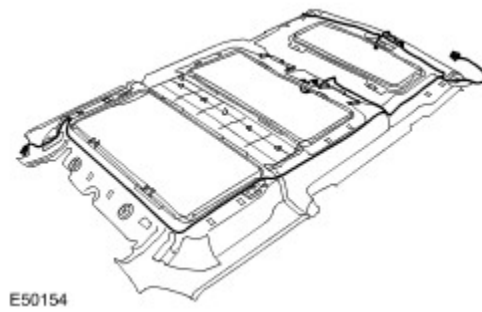

- 17 . Remove the headliner wiring harness.



Installation

- 1 . Install the headliner wiring harness.
 - Secure the wiring harness to the headliner.
- 2 . Install the interior lamp.
 - Secure with the clip.
 - Connect the electrical connector.
 - Repeat the above procedure for the other side.
- 3 . With assistance, carefully install the headliner.
 - Secure with the clips.
- 4 . Connect the headliner wiring harness rear electrical connector.
- 5 . Install the rear headliner trim panel.
 - Secure the clips.
- 6 . Reposition the rear seats.
- 7 . Reposition the front seats.
- 8 . Install the passenger assist handles.
 - Install the screws.
 - Secure the screw covers.
- 9 . Install the sun visors.
 - Install the clips.
 - Install the screws.
 - Install the screw covers.
 - Connect the electrical connectors.
- 10 . Connect the RH A-pillar electrical connector.

- 11 . Install the rear overhead console.
 -  Connect the electrical connectors.
 -  Carefully secure the clips.
- 12 . Install the front overhead console.
 -  Connect the electrical connectors.
 -  Carefully secure the clips.
- 13 . Install both D-pillar upper trim panels. For additional information, refer to [D-Pillar Trim Panel \(76.13.30\)](#) (Section 501-05)
- 14 . Install both C-pillar upper trim panels. For additional information, refer to [C-Pillar Upper Trim Panel \(76.13.35\)](#) (Section 501-05)
- 15 . Install both B-pillar upper trim panels. For additional information, refer to [B-Pillar Upper Trim Panel \(76.13.28\)](#) (Section 501-05)
- 16 . Install both A-pillar upper trim panels. For additional information, refer to [A-Pillar Trim Panel \(76.13.26\)](#) (Section 501-05)