

Published : Mar 4, 2004


## Rear Quarter Panel Moulding (76.43.55)

### Removal


1. Remove the mud flap.  
▶ Remove the 3 screws.



2. Remove the rear quarter panel moulding.  
▶ Remove the 3 clips from the underside of the moulding.  
▶ Release the 6 clips from the rear quarter panel.

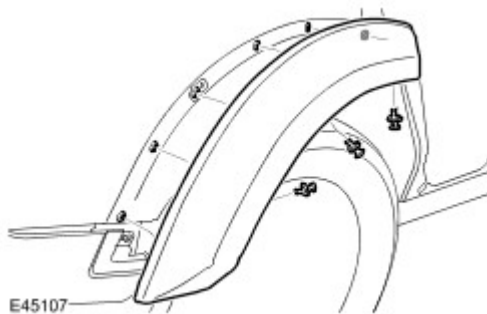

3. **NOTE :**  
Do not disassemble further if the component is removed for access only.  
Remove the clips from the moulding.

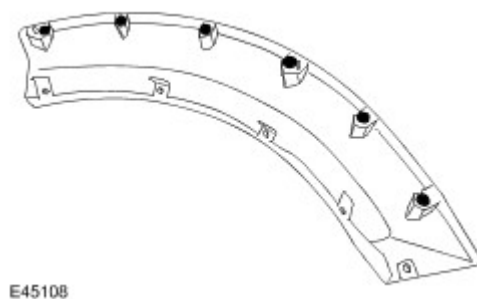

### Installation

1. To install, reverse the removal procedure.

