


Published : Sep 16, 2004

## Rear Quarter Window Moulding

### Removal

- 1 . Open the liftgate.
- 2 . Remove the rear quarter window moulding.
  - Remove the 4 clips.
  - Release the locating peg.

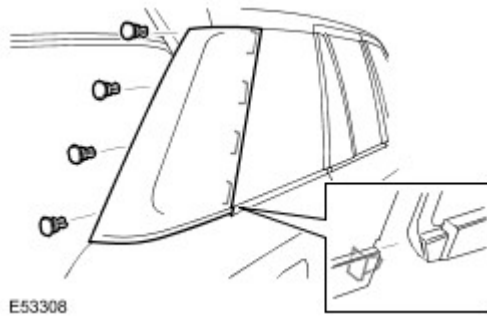

### Installation

- 1 . Install the rear quarter window moulding.
  - Position the locating peg.
  - Secure the clips.