

Published : Jul 28, 2004



Exterior Mirror Glass (76.11.08)

Removal

- 1 . Tilt the exterior mirror glass upwards.
- 2 . Release the exterior mirror glass.
 - ▶ Carefully apply an even pressure to the base of the glass at two points, to release the 3 clips.



- 3 . Remove the exterior mirror glass.
 - ▶ Release the glass from the motor.
 - ▶ Disconnect the 2 electrical connectors.

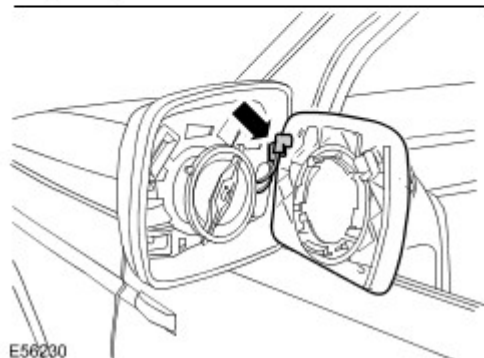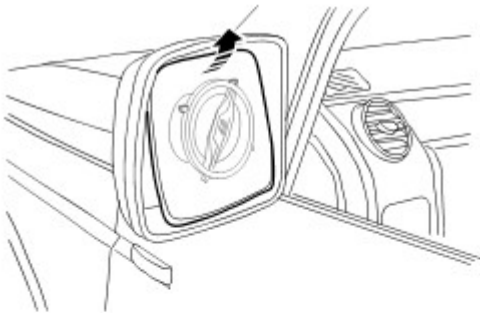

Installation

- 1 . Install the exterior mirror glass.

- ▶ Connect the electrical connectors.
- ▶ Align the glass to the motor.
- ▶ Apply an even pressure to secure glass to the clips.

2 . Check the operation of the exterior mirror.