

Published : Aug 5, 2004

## Front Seat Backrest Heater Mat (78.90.36)

### Removal

- 1 . Remove the front seat backrest cover. For additional information, refer to [Front Seat Backrest Cover \(78.90.08\)](#) (Section 501-10)
- 2 . **NOTE :**  
Front seat cushion heater mat shown in illustration. Removal of backrest heater mat is the same.  
Remove the front seat backrest heater mat.



### Installation

- 1 . Install the front seat backrest heater mat.
- 2 . Install the front seat backrest cover. For additional information, refer to [Front Seat Backrest Cover \(78.90.08\)](#) (Section 501-10)