

Published : Feb 28, 2005


Front Seat Cushion Cover (78.30.01)

Removal

1. Remove the front seat cushion assembly. For additional information, refer to [Front Seat Cushion \(78.10.12/99\)](#) (Section 501-10)
2. Release the front seat cushion cover.
 - ▶ Release the 13 clips.



3. Remove the front seat cushion cover.
 - ▶ Remove the 12 hog rings.

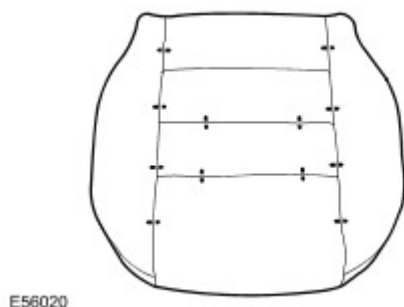

Installation

1. Install the front seat cushion cover.
 - ▶ Install the hog rings.
 - ▶ Attach the cover and secure with the clips.
2. Install the front seat cushion assembly. For additional information, refer to [Front Seat Cushion \(78.10.12/99\)](#) (Section 501-10)