

Published : Aug 3, 2004

Front Seat Cushion Heater Mat (78.30.23)

Removal

1. Remove the front seat cushion cover. For additional information, refer to [Front Seat Cushion Cover \(78.30.01\)](#) (Section 501-10)
2. Remove the front seat cushion heater mat.



Installation

1. Install the front seat cushion heater mat.
2. Install the front seat cushion cover. For additional information, refer to [Front Seat Cushion Cover \(78.30.01\)](#) (Section 501-10)