

Published : Aug 3, 2004

Front Seat Cushion (78.10.12/99)

Removal

NOTE :

In this procedure the cushion is removed as an assembly. There is a separate procedure showing removal of the cushion cover.

1. Remove the front seat cushion assembly.
 - Release and disconnect the 2 electrical connectors.
 - Remove the 4 Torx bolts.



E55647

Installation

1. Install the front seat cushion assembly.
 - Tighten the Torx bolts to 25 Nm (18 lb.ft).
 - Connect and secure the electrical connectors.