

Front Seat (78.10.44/99)

Removal



WARNING: It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.




WARNING: Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.


1. Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00 General Information)

2. **NOTE :**
Torx bolts may be re-used.
Release the front seat.


- Remove the bolt covers.
- Remove and the 5 Torx bolts.

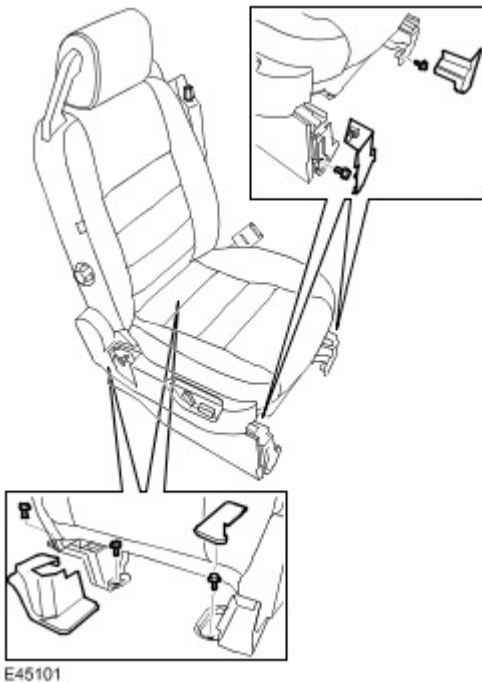

3. Release the safety belt lower anchor from the seat.
 - Remove the bolt cover.
 - Passenger side, disconnect the electrical connector.
 - Remove and discard the Torx bolt.

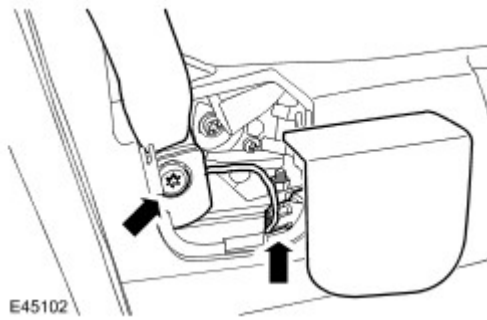

- 4 . With assistance, remove the front seat.
 - Protect the rocker panel.
 - Remove the bolt.
 - Disconnect the 2 electrical connectors.
 - Release the 2 wiring harness clips.

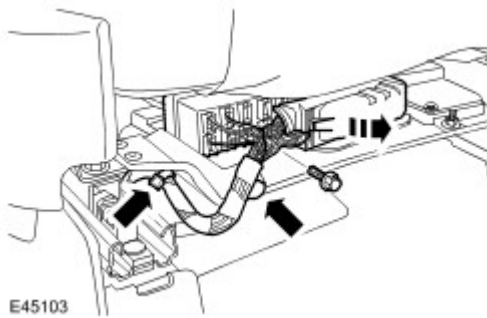

Installation

- 1 . With assistance, install the front seat.
 - Connect the electrical connectors.
 - Secure the wiring harness clips.
- 2 . Attach the safety belt lower anchor to the seat.
 - Tighten the new Torx bolt to 40 Nm (30 lb.ft).
 - Passenger side, connect the electrical connector.
 - Install the bolt cover.
- 3 . Secure the front seat.
 - Tighten the Torx bolts to 40 Nm (30 lb.ft).
 - Install the bolt covers.
- 4 . Connect the battery ground cable.