

Published : Oct 27, 2005

## Rear Seat - Vehicles With: 40/20/40 Split Seat (78.10.70/78.10.71)

### Removal


1 .

**NOTE :**

The Torx bolts can be re-used.

Release the rear seat.

- Remove the front 2 Torx bolts.
- Fold the seat assembly forwards.
- Disconnect the electrical connector.
- Remove the rear 2 Torx bolts.

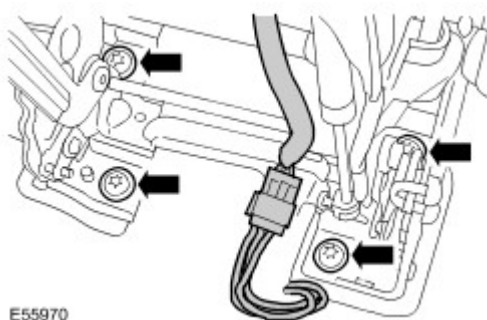

2 .

Remove the rear seat assembly.

### Installation

1 .

Install the rear seat assembly.

2 .

Secure the rear seat.

- Connect the electrical connector.
- Tighten the rear Torx bolts to 45 Nm (33 lb.ft).
- Fold seat assembly rearwards.
- Tighten the front Torx bolts to 45 Nm (33 lb.ft).