

## Rear Seat - Vehicles With: 60/40 Split Seat (78.10.70/78.10.71)

### Removal

#### NOTE :

This procedure shows the removal and installation of both the LH and the RH seats.


1 .

#### NOTE :

The Torx bolts can be re-used.

Release the RH rear seat.

- Fold the LH seat cushion forward.
- Remove the 4 Torx bolts.
- Fold down the rear seat backrest.

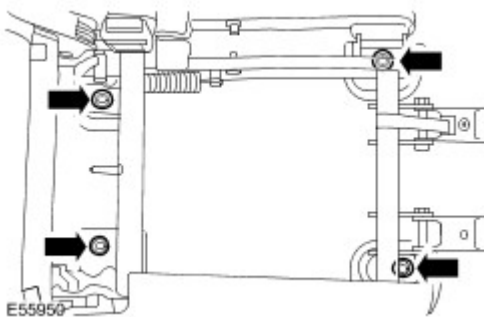

2 .

Remove the RH rear seat.


3 .

#### NOTE :

The Torx bolts can be re-used.

Release the LH rear seat.

- Fold the LH seat cushion forward.
- Remove the 6 Torx bolts.
- Fold down the rear seat backrest.

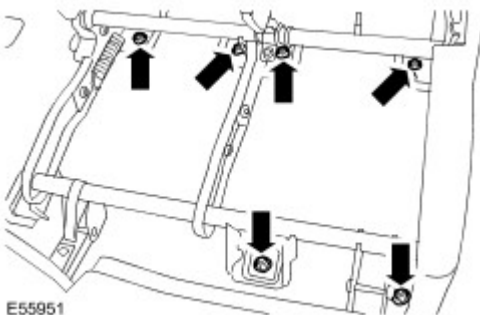

4 .

With assistance, remove the LH rear seat assembly.

### Installation

- 1 . With assistance, install the LH rear seat assembly.
  - ▶ Position the seat on the dowels.
- 2 . Secure the LH rear seat.
  - ▶ Return the seat backrest to the upright position.
  - ▶ Tighten the Torx bolts to 40 Nm (30 lb.ft).
  - ▶ Fold the seat cushion rearwards.
- 3 . Install the RH rear seat.
  - ▶ Position the seat on the dowels.
- 4 . Secure the RH rear seat.
  - ▶ Return the seat backrest to the upright position.
  - ▶ Tighten the Torx bolts to 40 Nm (30 lb.ft).
  - ▶ Fold the seat cushion rearwards.