

Published : Aug 4, 2004

Rear Seat Backrest Cover - Vehicles With: 60/40 Split Seat (78.90.72)


Removal

NOTE :

This procedure shows the removal of both the LH and RH covers.

- 1 . LH seat only: Remove the safety belt retractor cover and guide.

➤ Remove the 2 screws.

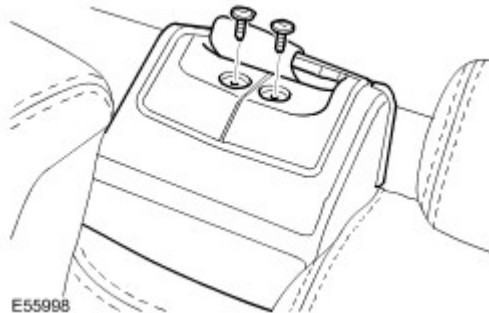

- 2 . Remove the rear seat release handle.




- 3 . Remove the rear seat release handle finisher.

➤ Remove the screw.




- 4 . Remove the rear seat head restraint.

➤ Depress the 2 retaining clips.

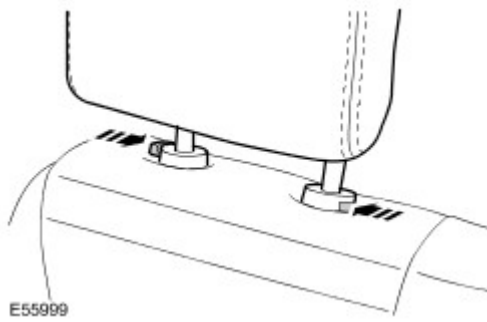


5. Remove the rear seat head restraint retaining clips.

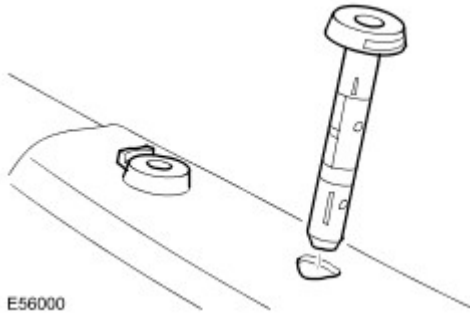



6. Release the rear LH seat backrest cover.

► Release the 10 clips.

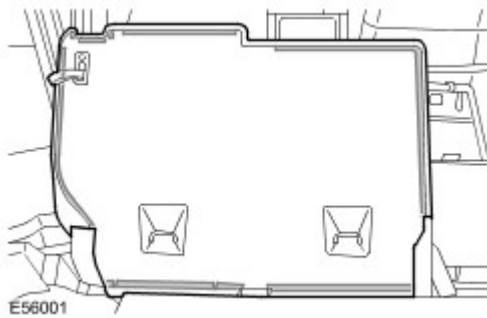

7. Remove the rear LH seat backrest cover.


► Remove the 41 hog rings.

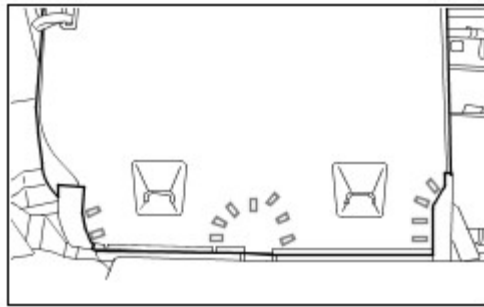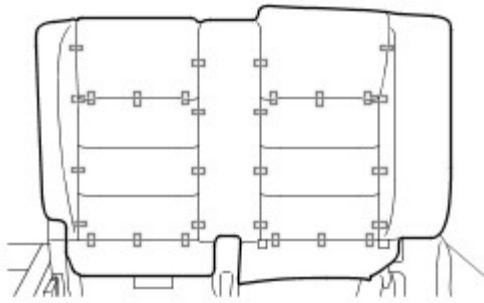

E56013

- 8 . Release the rear RH seat backrest cover.


➤ Release the 9 clips.

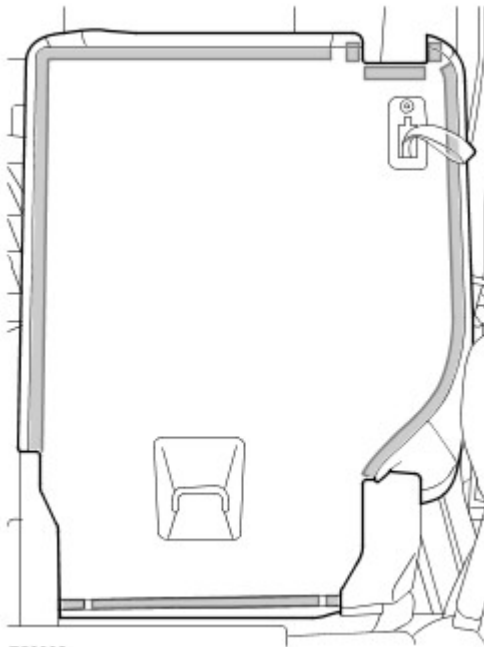

E56002

- 9 . Remove the rear RH seat backrest cover.

➤ Remove the 24 hog rings.

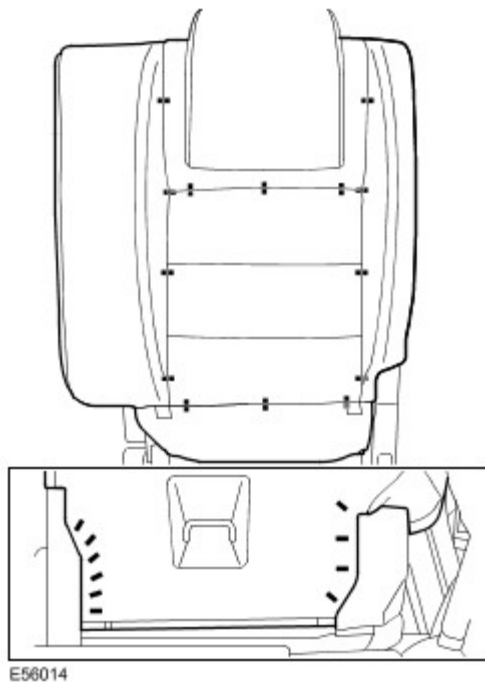

Installation

- 1 . Install the rear seat backrest cover.
 - Install the hog rings.
 - Attach the clips.
- 2 . Install the rear seat head restraint retaining clips.
- 3 . Install the rear seat head restraint.
- 4 . Install the rear seat release handle finisher.
 - Tighten the screw.
- 5 . Install the rear seat release handle.
- 6 . Install the safety belt guide and retractor cover.
 - Attach the safety belt guide and retractor cover.
 - Tighten the screws.