


Published : Aug 3, 2004

Rear Seat Cushion Cover - Vehicles With: 40/20/40 Split Seat (78.40.70)

Removal


1. Remove the outer backrest hinge cover.
 - Fold the seat assembly forwards.
 - Remove the screw.

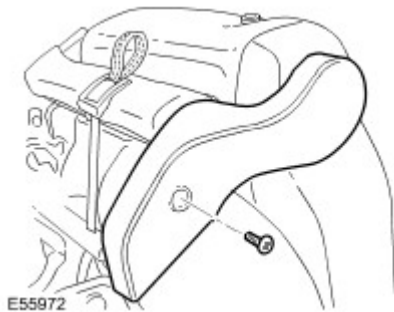

2. Remove the inner backrest hinge cover.
 - Release the backrest cover side clip.
 - Release the 2 clips.
 - Remove the screw.




3. Remove the rear seat cushion side finisher.
 - Remove the 2 screws.

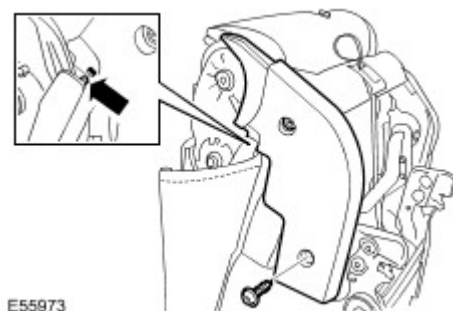


4. Remove the seat rear release strap finisher.

- Remove the screw.

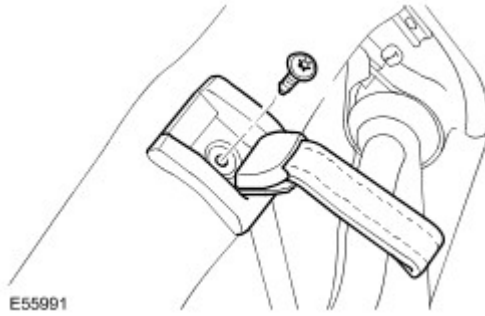


5. Remove the seat front release strap finisher.

- Remove the screw.

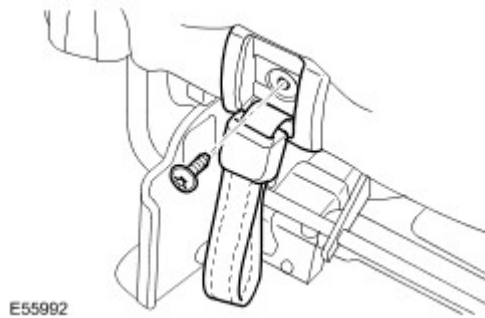

6. Remove the seat cushion finishers.


- Remove the 2 screws.

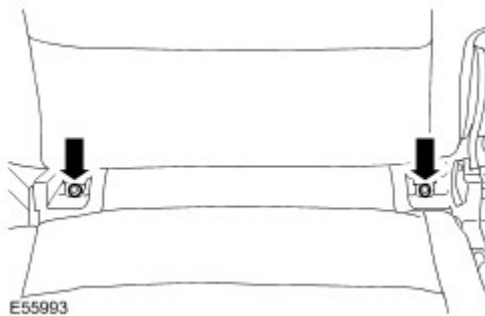


7. Remove the rear safety belt buckle.

- Remove the Torx bolt.


- Release the spring.

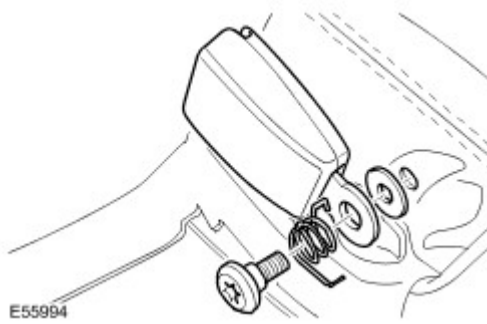

- 8 . Release the rear seat cushion cover.
- ▶ Release the 15 clips.

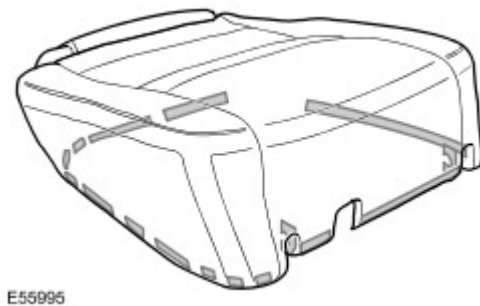



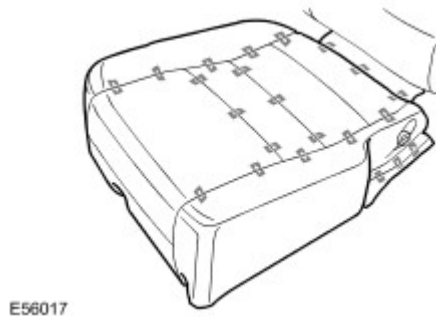






- 9 . Remove the rear seat cushion cover.
- ▶ Remove the 22 hog rings.



Installation

- 1 . Install the rear seat cushion cover.
 - ▶ Install the hog rings.
 - ▶ Install the clips.
- 2 . Install the rear safety belt buckle.
 - ▶ Attach the spring.
 - ▶ Tighten the Torx bolt to 45 Nm (33 lb.ft).
- 3 . Install the seat cushion finishers.

-  Tighten the screws.
- 4 . Install the seat front release strap finisher.
 -  Remove the screw.
 -  Tighten the screw.
- 5 . Install the seat rear release strap finisher.
 -  Tighten the screw.
- 6 . Install the inner backrest hinge cover.
 -  Attach the clips.
 -  Tighten the screw.
- 7 . Install the outer backrest hinge cover.
 -  Tighten the screw.
 -  Fold seat assembly rearwards.
- 8 . Install the rear seat cushion side finisher.
 -  Tighten the screws.