

Published : Aug 3, 2004


Rear Seat Cushion Cover - Vehicles With: 60/40 Split Seat (78.40.70)

Removal

NOTE :


This procedure shows the removal and installation of both the LH and the RH covers.

- 1 . Fold the seat cushion forward.
- 2 . Release the rear LH seat cushion cover.
▶ Release the clip.

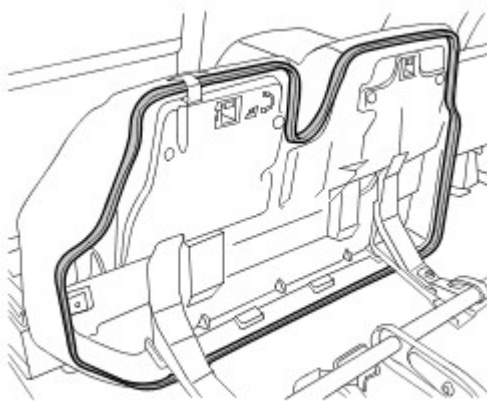


E55996

- 3 . Remove the rear LH seat cushion cover.
▶ Remove the 21 hog rings.

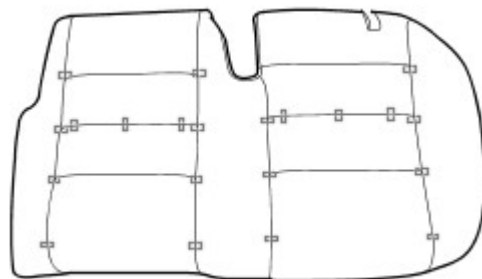


E56015

- 4 . Release the rear RH seat cushion cover.
▶ Release the clip.

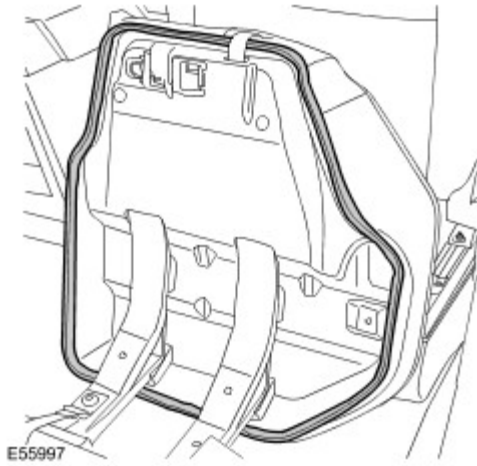

5. Remove the rear RH seat cushion cover.
 - Remove the 10 hog rings.

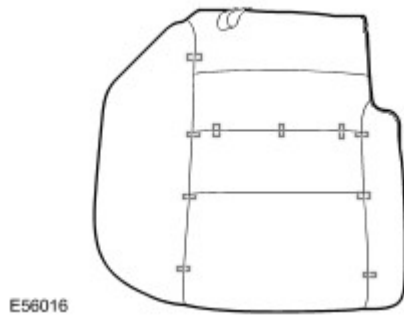

Installation

1. Install the rear seat cushion cover.
 - Install the hog rings.
 - Attach the retaining clip.
2. Fold the seat cushion rearwards.