


Published : Aug 3, 2004


Third Row Seat Backrest Cover (78.90.17)

Removal

- 1 . Fold the seat cushion assembly forwards.
- 2 . Remove the seat backrest hinge inner covers.
 - ▶ Release the clip.

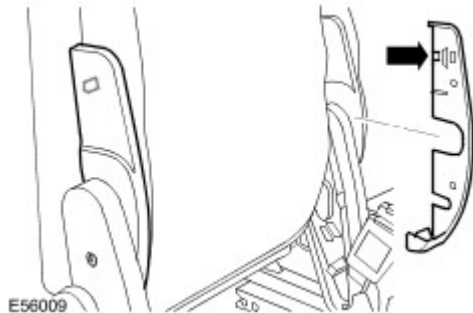

- 3 . Remove the seat backrest latch covers.
 - ▶ Remove the 2 screws.

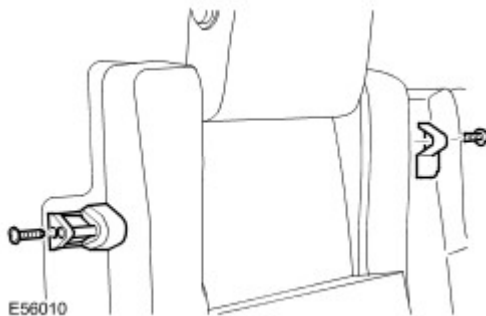

- 4 . Remove the seat backrest cover.
 - ▶ Fold the seat cushion forward.
 - ▶ Release the 14 clips.



Installation

1. To install, reverse the removal procedure.