


Published : Aug 3, 2004

Third Row Seat Cushion Cover (78.40.06)

Removal


1. Remove the third row seat cushion latch covers.

➤ Remove the 4 screws.

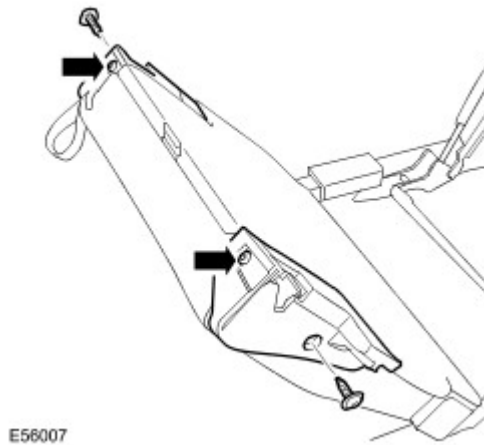

2. Remove the third row seat cushion cover.

➤ Release the 7 clips.

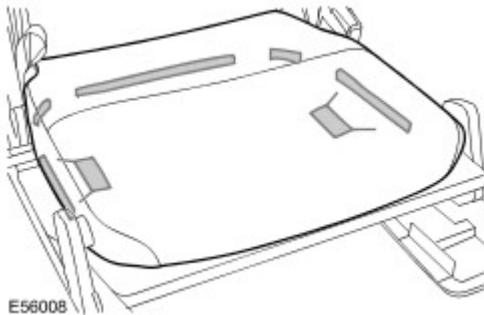

Installation

1. To install, reverse the removal procedure.