

Published : Aug 3, 2004


Third Row Seat Cushion (78.40.52)

Removal

NOTE :

In this procedure the cushion is removed as an assembly. There is a separate procedure for removing and installing the cushion cover.

1. Remove the third row seat cushion.
 - Remove the 2 Allen bolts.
 - Release the cushion from the seat frame.

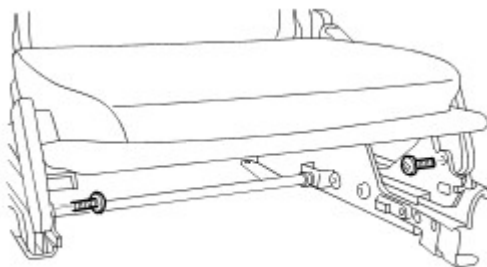

E56012

Installation

1. **NOTE :**
 - Ensure seat cushion return springs are correctly located.
 - Install the third row seat cushion.
 - Attach the cushion to the seat frame.
 - Tighten the Allen bolts to 25 Nm (18 lb.ft).