

## Third Row Seat (78.10.39)


### Removal

**NOTE :**

Third row seats must be removed as a pair.


- 1 . Remove the loadspace compartment anchors.

➤ Remove the 4 Torx bolts.

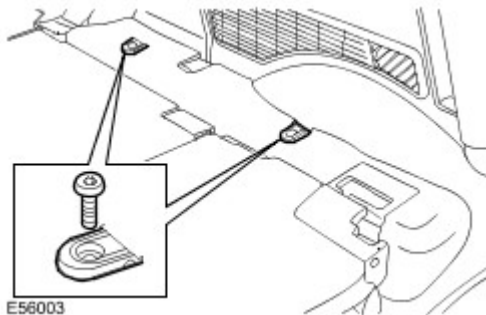

- 2 . Remove the loadspace trim panels.

➤ Release from the 4 clips.

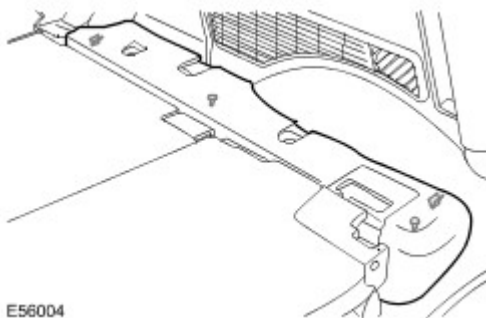



- 3 . **NOTE :**

Torx bolts may be re-used.

Remove the third row seats.

➤ Release the trim cover.

➤ Remove the 10 Torx bolts.

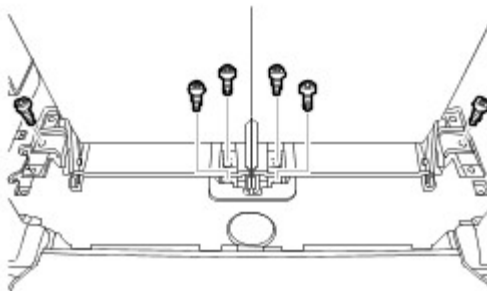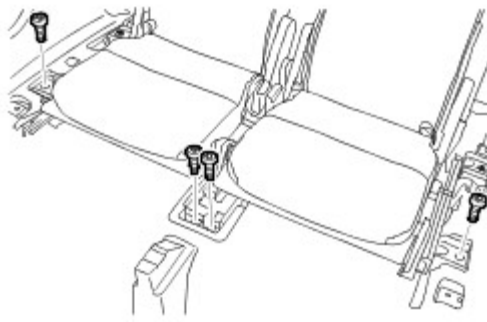

E56005


4 .

**NOTE :**

Do not disassemble further if the component is removed for access only.

Separate the third row seats.

- Remove the seat frame finisher.
- Drill out the 6 rivets.
- Remove the 2 brackets.

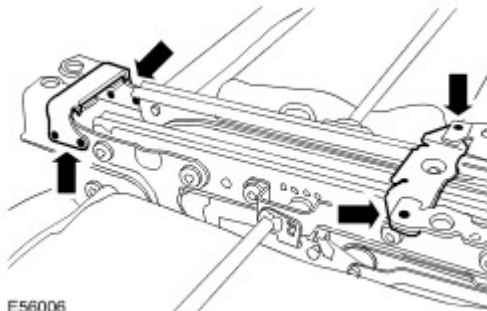

E56006

**Installation**

1 .



Attach the third row seats.

- Install the brackets.
- Install the rivets.

2 .

Install the third row seats.

- Tighten the Torx bolts to 40 Nm (30 lb.ft).
- Secure the trim cover.

- 3 . Install the loadspace trim panels.
  -  Secure in the clips.
- 4 . Install the loadspace compartment anchors.
  -  Tighten the Torx bolts to 25 Nm (18 lb.ft).