

Published : Jun 17, 2004

Rear Door Window Glass (76.31.02)

Removal

NOTE :

Once the rear door window fixed glass has been removed the rear door glass can be simply lifted and removed from the door.

NOTE :

The door glass should be lowered by approximately one third.

- 1 . Remove the rear door window fixed glass. For additional information, refer to [Rear Door Fixed Window Glass \(76.31.31\)](#) (Section 501-11)
- 2 . Remove the rear door window glass.

3 .

NOTE :


Do not disassemble further if the component is removed for access only.

NOTE :

Note the fitted position.

Remove the glass retaining clip.

- Remove the Torx bolt.
- Remove the spacer washer.
- Remove the flat washer.

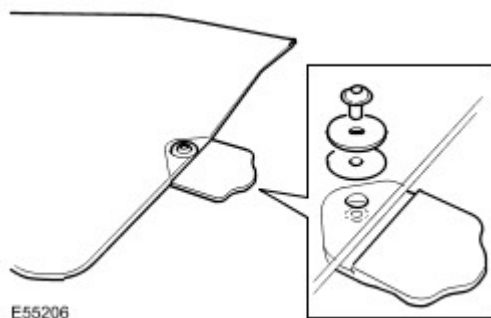

Installation

- 1 . Install the glass retaining clip.
 - Install the spacer.
 - Install the washer.
 - Tighten the Torx screws to 8 Nm (6 lb.ft).
- 2 . Install the rear door window glass.
- 3 . Install the rear door window fixed glass. For additional information, refer to [Rear Door Fixed Window Glass \(76.31.31\)](#) (Section 501-11)