




Instrument Panel Upper Section (76.46.04)

Removal


1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
3. Remove the instrument panel driver side reinforcement. For additional information, refer to [Instrument Panel Driver Side Reinforcement \(76.46.31\)](#) (Section 501-12)
4. Remove the instrument panel passenger side reinforcement. For additional information, refer to [Instrument Panel Passenger Side Reinforcement \(76.46.32\)](#) (Section 501-12)
5. Remove the instrument panel speaker. For additional information, refer to [Instrument Panel Speaker \(86.50.11\)](#) (Section 415-03)
6. Remove both A-pillar upper trim panels. For additional information, refer to [A-Pillar Trim Panel \(76.13.26\)](#) (Section 501-05)
7. Remove the sunload sensor.
 - ▶ Release the 2 clips.
 - ▶ Disconnect the electrical connector.




8. Release the passenger air bag module bracket.
 - ▶ Remove the 2 Torx screws.

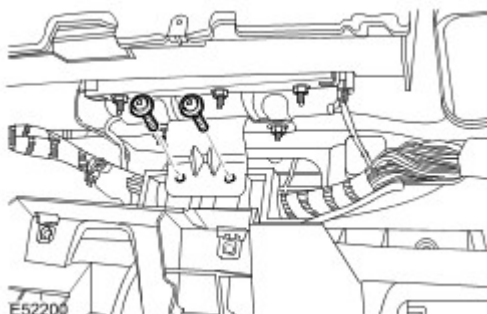

9. Disconnect the 3 electrical connectors from the passenger air bag module.

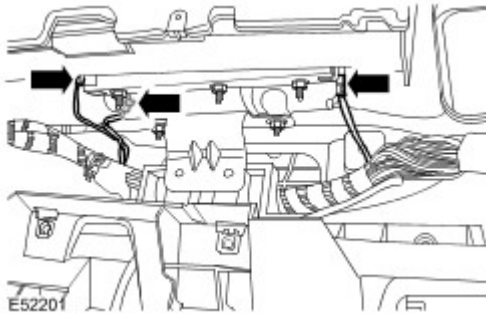


10. **NOTE :**
Avoid dropping the screw inside the instrument panel.
Remove 1 Torx screw and 1 bolt, from the instrument panel upper section speaker aperture.

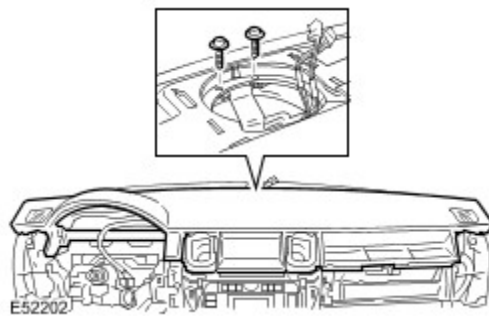


11. Release the instrument panel wiring harness.

➤ Release the 2 clips.

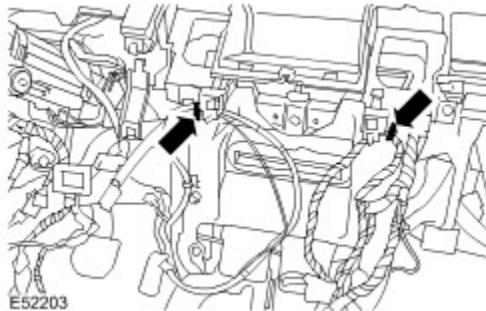

12. With assistance, remove the instrument panel upper section.

➤ Remove the 5 Torx screws.

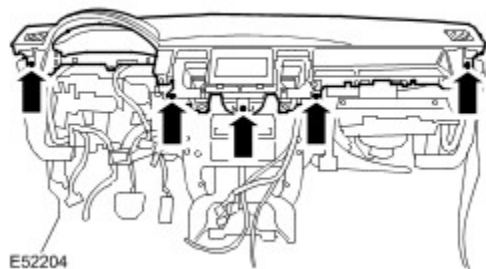

13 .

NOTE :

Do not disassemble further if the component is removed for access only.
Remove the passenger air bag module.


- ▶ Remove the 4 nuts.



14 .

Remove the windshield defroster duct.

- ▶ Remove the 7 screws.

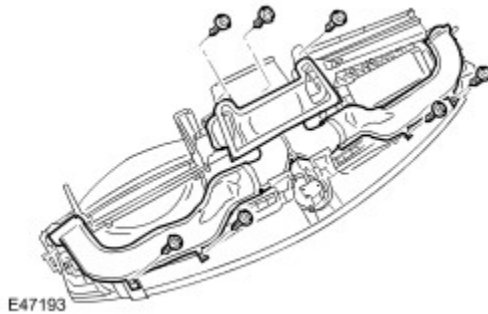**Installation**

1 .

Install the windshield defroster duct.

- ▶ Tighten the screws.

2 .

Install the passenger air bag module.

- ▶ Tighten the nuts to 10 Nm (7 lb.ft).

3 .

With assistance, install the instrument panel upper section.

- ▶ Tighten the screws.
▶ Attach the wiring harness.

4 .

Tighten the instrument panel upper section speaker aperture bolt to 10 Nm (7 lb.ft).



5 .

Secure the passenger air bag module bracket.

- ▶ Tighten the Torx screws to 25 Nm (18 lb.ft).

6 .

Connect the passenger air bag module electrical connectors.

- 7 . Install the sunload sensor.
 -  Connect the electrical connector.
 -  Secure with the clips.
- 8 . Install the A-pillar trim panels. For additional information, refer to [A-Pillar Trim Panel \(76.13.26\)](#) (Section 501-05)
- 9 . Install the speaker For additional information, refer to [Instrument Panel Speaker \(86.50.11\)](#) (Section 415-03)
- 10 . Install the instrument panel passenger side reinforcement. For additional information, refer to [Instrument Panel Passenger Side Reinforcement \(76.46.32\)](#) (Section 501-12)
- 11 . Install the instrument panel driver side reinforcement. For additional information, refer to [Instrument Panel Driver Side Reinforcement \(76.46.31\)](#) (Section 501-12)
- 12 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)