




Front Door Latch (76.37.12)


Removal

1. Remove the window motor and regulator assembly. For additional information, refer to [Front Door Window Regulator and Motor \(86.25.03\)](#) (Section 501-11)

2.  **CAUTION: Release the exterior door handle and screw cover clips from inside the door.**

Remove the front door exterior handle. For additional information, refer to [Exterior Front Door Handle \(76.58.07\)](#) (Section 501-14)


3. Release the remote control cable.
 - Release the grommet.
4. Release the door exterior handle mechanism.
 - Remove the adhesive tape from the access hole.
 - Remove the Torx screw.
 - Remove the locking pin.
5. Remove the front door latch assembly.
 - Disconnect the electrical connector.
 - Remove the 3 Torx screws.

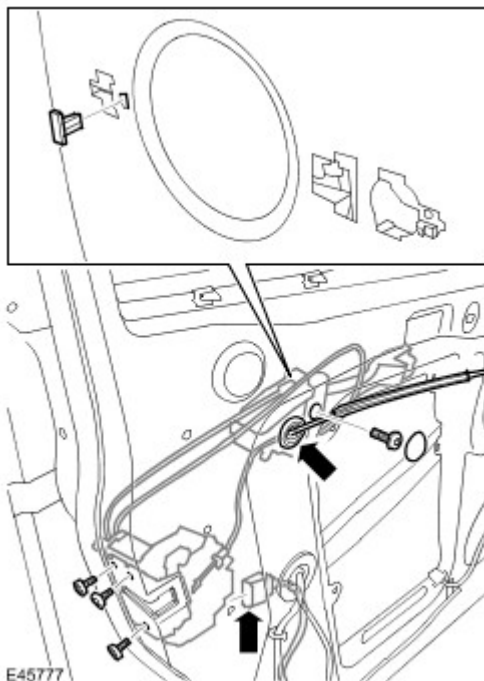

6. **NOTE :**


Do not disassemble further if the component is removed for access only.
Remove the door latch remote control cable.

- Release the cable from the abutment bracket.
- Remove the cable from the lever.

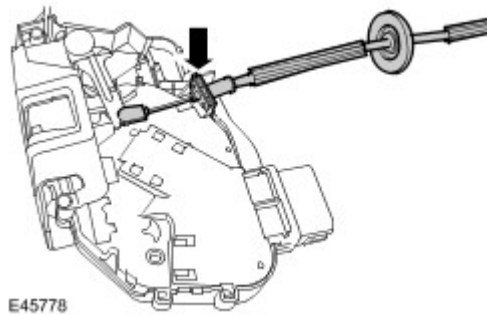


- 7 . Release the exterior door handle mechanism cable from the door latch.

- Release the cable from the abutment bracket.
- Remove the cable from the lever.

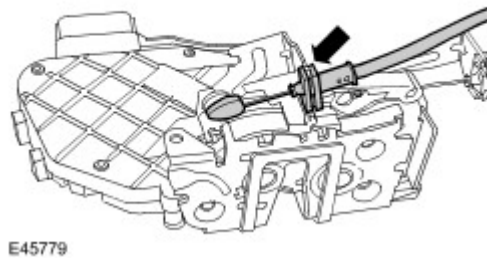

- 8 . LH side: Release the door lock cylinder cable from the door latch.

- Release the cable from the abutment bracket.
- Remove the cable from the lever.

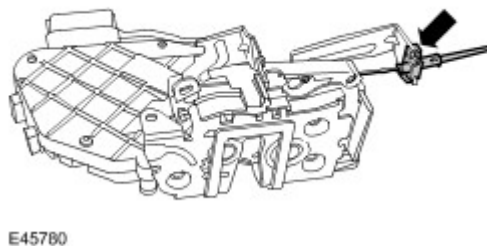


Installation

- 1 . LH side: Connect the door lock cylinder cable to the door latch.

- Connect the cable to the lever.
- Secure the cable to the abutment bracket.

- 2 . Connect the door exterior handle mechanism cable to the door latch.
 - Connect the cable to the lever.
 - Secure the cable to the abutment bracket.
- 3 . Install the remote control cable to the door latch.
 - Connect the cable to the lever.
 - Secure the cable to the abutment bracket.
- 4 . Set the exterior handle mechanism.
 - Rotate the lever.
 - Engage the retaining tang.

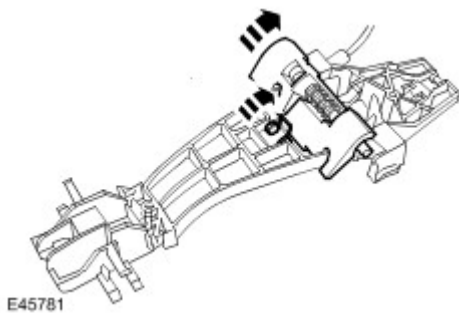

- 5 . Install the front door latch assembly.
 - Tighten the Torx screws to 10 Nm (7 lb.ft).
 - Connect the electrical connector.
- 6 . Install the door exterior handle mechanism.
 - Position the mechanism to the door.
 - Fit the locking pin.
 - Fit and tighten the Torx screw.
- 7 . LH side: Position the control cables into the retainers.
- 8 . Position the remote control cable to the door.
 - Install the grommet.
- 9 . Install the front door exterior handle. For additional information, refer to [Exterior Front Door Handle \(76.58.07\)](#) (Section 501-14)
- 10 . Install the window motor and regulator assembly. For additional information, refer to [Front Door Window Regulator and Motor \(86.25.03\)](#) (Section 501-11)