





## Hood Latch Release Handle (76.16.30)

### Removal

1. Remove the cowl side trim panel. For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#) (Section 501-05)
2. Disconnect the hood release cable from the connecting box.
  - ▶ Open the connecting box cover.

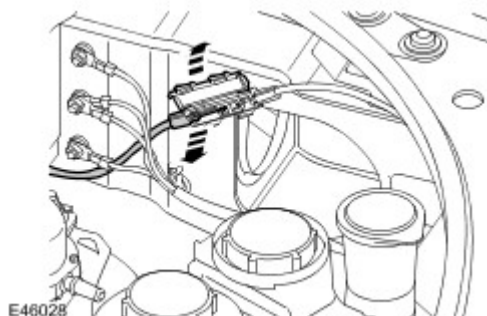

3. Remove the hood release lever housing.
  - ▶ Remove the bolt.
  - ▶ Disconnect the hood release cable.

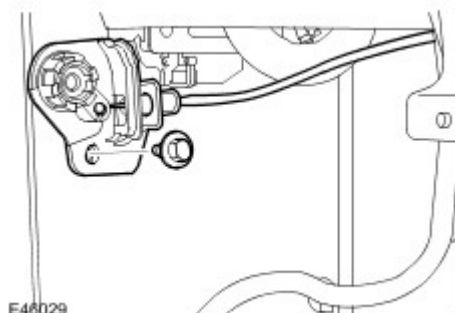

### Installation

1. Install the hood release lever housing.
  - ▶ Connect the hood release cable.
  - ▶ Tighten the bolt to 5 Nm (3.7 lb.ft).
2. Attach the hood release cable to the connecting box.
  - ▶ Close the connecting box cover.
3. Install the cowl side trim panel. For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#) (Section 501-05)