



## Ignition Lock Cylinder (57.40.28)


### Removal

#### NOTE :

This procedure is for removal and installation of the ignition lock cylinder. The ignition lock and door lock cylinders are replaced in sets.

- 1 . Fully extend the steering column for access.
- 2 . Remove the steering column upper shroud.

➤ Release the 4 clips.

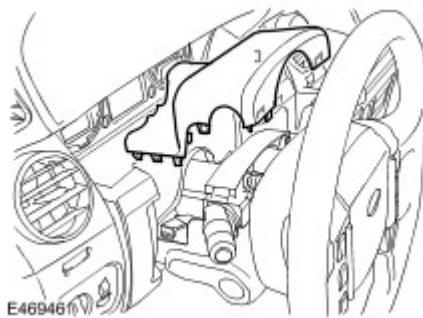

- 3 . Remove the steering column lower shroud.


➤ Remove the 3 Torx screws.

➤ Release the steering column adjustment lever.




- 4 . Remove the passive coil.
  - Disconnect the electrical connector.
  - Release the 2 clips.

- 5 . Remove the ignition lock cylinder.
  - Turn the ignition key to position 1.
  - Insert a pin, not exceeding 2 mm diameter, through the access hole in the ignition lock cylinder housing to depress the plunger, and release the ignition lock cylinder.

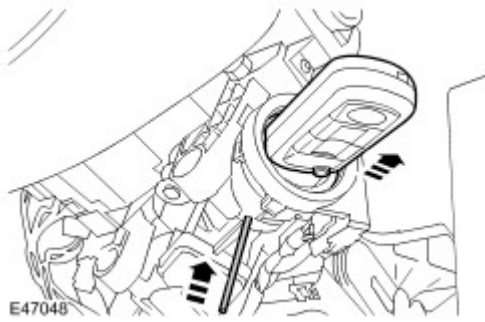

## Installation

- 1 . Install the ignition lock cylinder.
  - Turn the ignition key to position 1.
  - Locate into guides and depress the plunger.

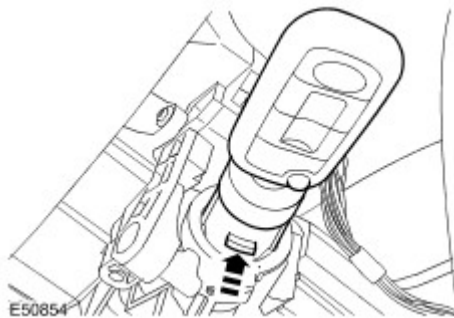

- 2 . Install the passive coil.
  - Secure the clips.
  - Connect the electrical connector.
- 3 . Install the steering column shrouds.
  - Tighten the Torx screws.
  - Secure the clips.
  - Secure the adjustment lever.