





Liftgate Latch Actuator (86.26.27)

Removal


1. Remove the tailgate trim panel. For additional information, refer to [Tailgate Trim Panel \(76.49.23\)](#) (Section 501-05)
2. Release the liftgate actuator.
 - ▶ Loosen the 2 bolts.
 - ▶ Disconnect the electrical connector.

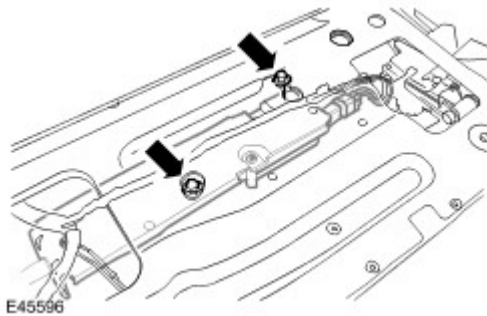

3. Remove the actuator cover.
 - ▶ Remove the 2 Torx screws.

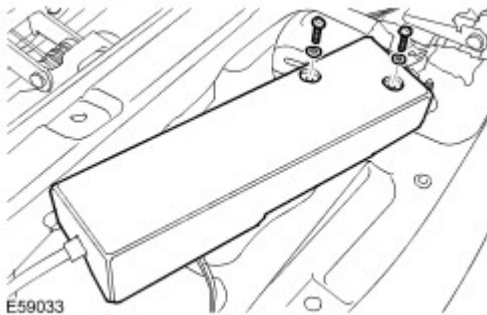

4. Remove the liftgate actuator.
 - ▶ Release the liftgate latch to actuator cable.

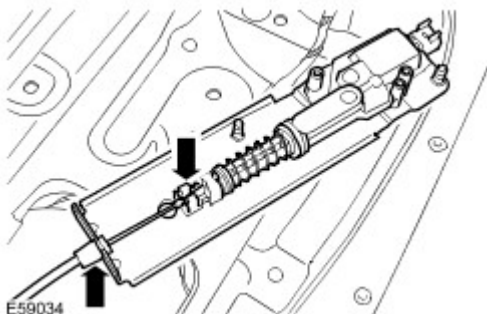


Installation

1 .



CAUTION: It is possible to incorrectly install the cable, ensure the ferrule and clip are fully engaged.

Attach the actuator to the liftgate latch cable.

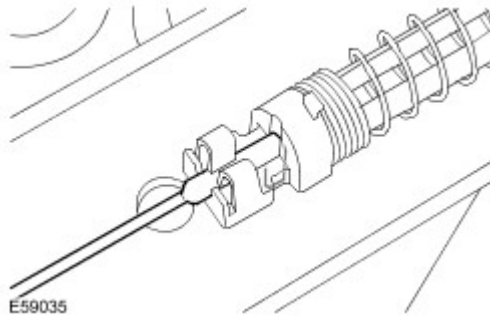

2 .

Install the cover.



Tighten the Torx screws.

3 .

Install the liftgate actuator.



Tighten the bolts to 10 Nm (7 lb.ft).



Connect and secure the electrical connector.

4 .

Install the tailgate trim panel. For additional information, refer to [Tailgate Trim Panel \(76.49.23\)](#) (Section 501-05)