





Liftgate Latch (76.37.19)

Removal

1. Remove the tailgate trim panel.
2. Release the liftgate latch.
 - ▶ Remove the 3 Torx screws.

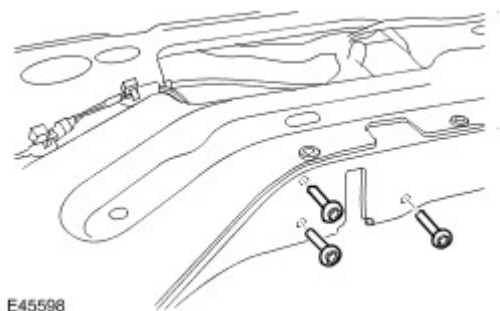

3. Remove the liftgate latch.
 - ▶ Disconnect the electrical connector.
 - ▶ Release the liftgate latch to actuator cable.

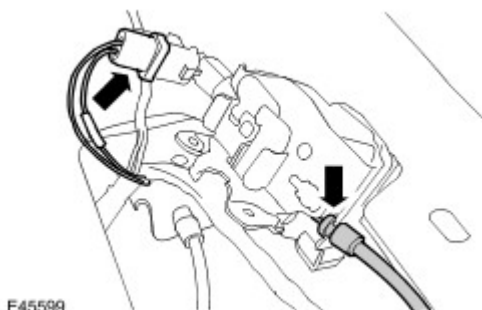

Installation

1. Install the liftgate latch.
 - ▶ Attach the liftgate latch to actuator cable.
 - ▶ Connect the electrical connector.
 - ▶ Tighten the Torx screws to 10 Nm (7 lb.ft).
2. Install the tailgate trim panel.
3. Adjust the liftgate striker. For additional information, refer to [Liftgate Striker Adjustment \(76.37.28\)](#) (Section 501-14)