




Liftgate Striker Adjustment (76.37.28)

- 1 . Check for an equal gap and alignment to the adjacent panels. If incorrect, follow the adjust procedure below.



E45607

- 2 . Remove the liftgate striker trim panel.

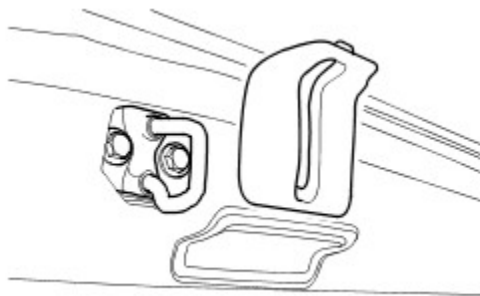

E45600

- 3 . Loosen the 2 liftgate striker bolts.
- 4 . Close the liftgate and check for an equal gap and alignment to the adjacent panels.
- 5 . Open the liftgate and tighten the liftgate striker bolts to 25 Nm (18 lb.ft).
- 6 . Install the liftgate striker trim panel.