




Tailgate Latch (76.37.83)

Removal

1. Remove the tailgate speaker assembly. For additional information, refer to [Tailgate Speaker \(86.50.47\)](#) (Section 415-03)
2. Remove the tailgate latch assembly.
 - Remove the 3 Torx bolts.
 - Disconnect the electrical connector.
 - Remove the latch.
 - Remove the latch plate.
 - Remove the latch actuator assembly.

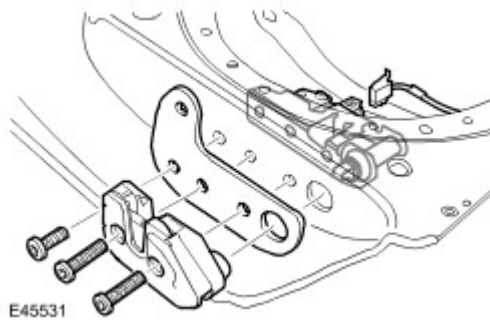

3. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the latch actuator.
 - Remove the 2 screws.



Installation

1. Install the latch actuator.
 - Tighten the screws.
2. Install the tailgate latch assembly.
Install the latch actuator assembly.

- ▶
 - ▶ Install the latch plate.
 - ▶ Install the latch.
 - ▶ Tighten the Torx screws to 25 Nm (18 lb.ft).
 - ▶ Connect the electrical connector.
- 3 . Install the tailgate speaker assembly. For additional information, refer to [Tailgate Speaker \(86.50.47\)](#) (Section 415-03)
- 4 . Adjust both the tailgate strikers. For additional information, refer to [Tailgate Striker Adjustment \(76.28.03\)](#) (Section 501-14)