





## Front Safety Belt Retractor (76.73.13)

### Removal


- 1 . Position the front seat fully forwards.
- 2 . Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
- 3 . Remove the B-pillar upper trim panel. For additional information, refer to [B-Pillar Upper Trim Panel \(76.13.28\)](#) (Section 501-05)
- 4 . Release the safety belt upper anchor from the B-pillar.
  - ▶ Remove and discard the Torx bolt.



- 5 . Release the front seat switch pack trim panel for access.
  - ▶ Remove the 2 screws.

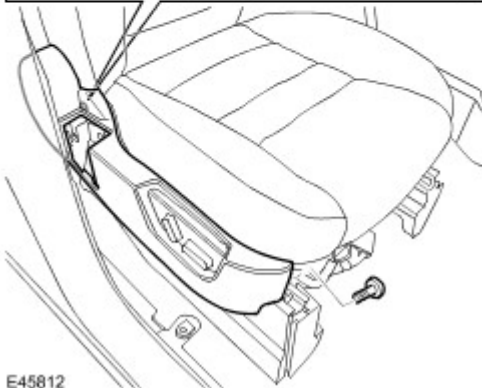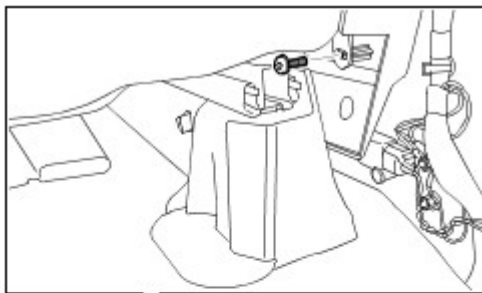

- 6 . Remove the front safety belt retractor.
  - Remove and discard the Torx bolt.

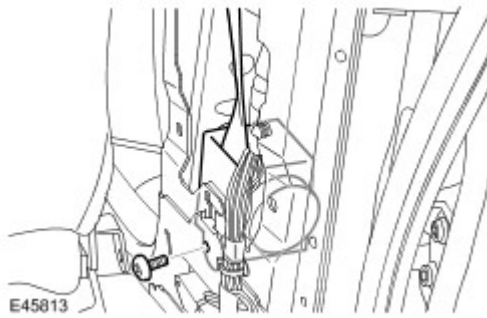

## Installation

- 1 . Install the front safety belt retractor.
  - Tighten the Torx bolt to 40 Nm (30 lb.ft).
- 2 . Install the front seat switch pack trim panel.
  - Tighten the screws.
- 3 . Attach the safety belt upper anchor.
  - Tighten the Torx bolt to 40 Nm (30 lb.ft).
- 4 . Install the B-pillar upper trim panel. For additional information, refer to [B-Pillar Upper Trim Panel \(76.13.28\)](#) (Section 501-05)