


Published : Aug 6, 2004




## Rear Safety Belt Buckle - Vehicles With: 40/20/40 Split Seat (76.73.30)

### Removal


1. Remove the inner backrest hinge cover.
  - Release the backrest cover side clip.
  - Remove the screw.
  - Release the 2 clips.

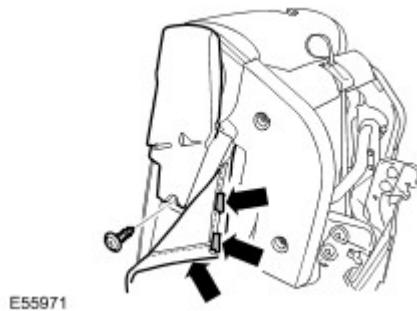

2. Remove the rear seat cushion side finisher.
  - Remove the 2 screws.
  - Release the tension strap.

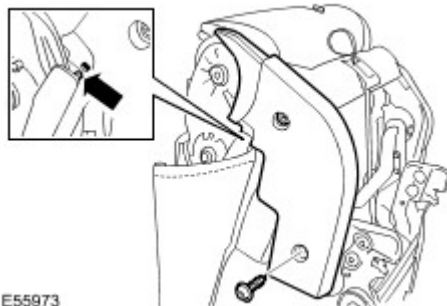

3. Remove the safety belt buckle.
  - Fold the seat assembly forwards.
  - Remove the Torx bolt.
  - Release the tension spring.

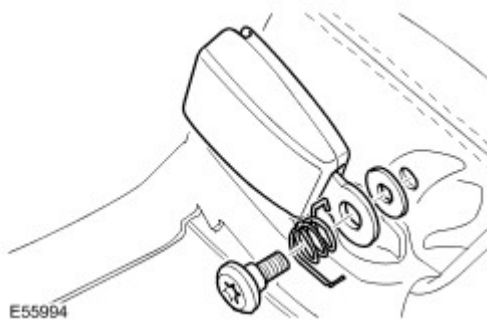

## Installation

- 1 . Install the safety belt buckle.
  - Attach the tension spring.
  - Tighten the Torx bolt to 25 Nm (18 lb.ft).
  - Fold seat assembly rearwards.
- 2 . Install the rear seat cushion side finisher.
  - Attach the tension strap.
  - Tighten the screws.
- 3 . Install the inner backrest hinge cover.
  - Attach the clips.
  - Tighten the screw.
  - Attach the backrest cover side clip.