


Published : Aug 5, 2004



Rear Safety Belt Buckle LH - Vehicles With: 60/40 Split Seat (76.73.60)

Removal

1. Remove the safety belt buckle.
 - Raise the seat cushion.
 - Release the retaining strap.
 - Remove the Torx bolt.
 - Release the tension spring.

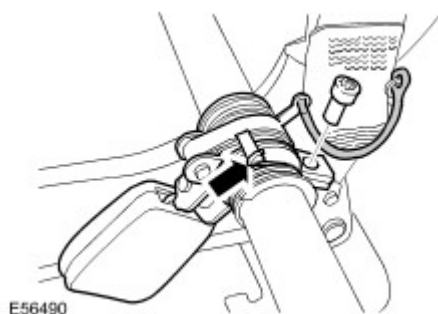

Installation

1. Install the safety belt buckle.
 - Attach the tension spring.
 - Tighten the Torx bolt to 25 Nm (18 lb.ft).
 - Attach the retaining strap.
 - Lower the seat cushion.