


Published : Aug 5, 2004




## Rear Safety Belt Buckle RH - Vehicles With: 60/40 Split Seat (76.73.62)

### Removal


1. Release the RH rear seat.
  - ▶ Fold the seat cushion forward.
  - ▶ Remove and discard the 4 Torx bolts.
  - ▶ Fold down the rear seat backrest.

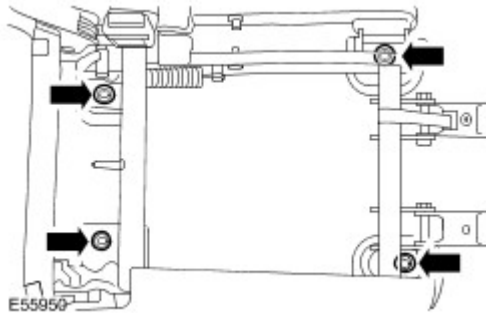

2. Remove the RH rear seat.
3. Remove the rear seat cushion side finisher.
  - ▶ Remove the screw.

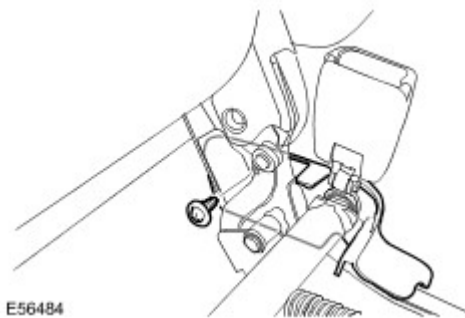

4. Remove the safety belt buckle.
  - ▶ Raise the seat cushion.
  - ▶ Release the retaining strap.
  - ▶ Remove and discard the bolt.

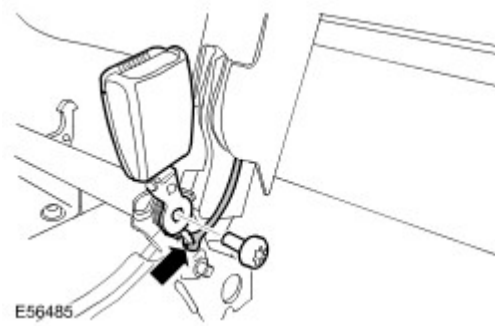

## Installation

- 1 . Install the safety belt buckle.
  - Tighten the Torx bolt to 40 Nm (30 lb.ft).
  - Attach the retaining strap.
  - Lower the seat cushion.
- 2 . Install the rear seat cushion side finisher.
  - Tighten the screw.
- 3 . Install the RH rear seat.
  - Position the seat on the dowels.
- 4 . Secure the RH rear seat.
  - Return the seat backrest to the upright position.
  - Tighten the new bolts to 40 Nm (30 lb.ft).
  - Fold the seat cushion rearwards.