




## Second Row Center Safety Belt Retractor - Vehicles With: 40/20/40 Split Seat (76.73.20)

### Removal


1. Remove the center seat. For additional information, refer to [Rear Seat - Vehicles With: 40/20/40 Split Seat \(78.10.70/78.10.71\)](#) (Section 501-10)

2. Release the safety belt retractor cover and guide


- Remove the 2 screws.
- Remove the safety belt guide.
- Remove the retractor cover.

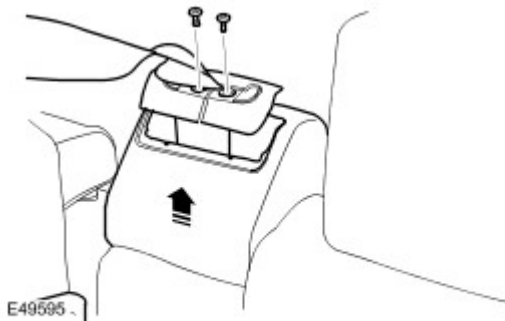

3. Remove the safety belt lower anchor.
  - Fold the LH outer seat assembly forwards.
  - Remove and discard the Torx bolt.

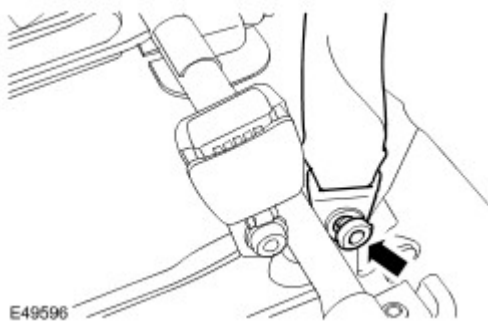

4. Remove the safety belt retractor assembly.
  - Remove and discard the Torx bolt.

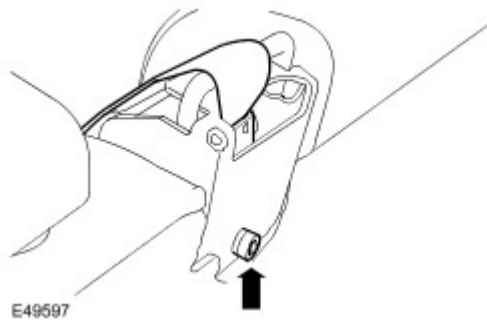

## Installation

- 1 . Install the safety belt retractor assembly.
  - ▶ Tighten the new Torx bolt to 40 Nm (30 lb.ft).
- 2 . Install the safety belt guide and retractor cover.
  - ▶ Attach the safety belt guide and retractor cover.
  - ▶ Tighten the screws.
- 3 . Install the safety belt lower anchor.
  - ▶ Tighten the new nut to 40 Nm (30 lb.ft).
  - ▶ Lower the seat cushion.
- 4 . Install the center seat. For additional information, refer to [Rear Seat - Vehicles With: 40/20/40 Split Seat \(78.10.70/78.10.71\)](#) (Section 501-10)