





Second Row Center Safety Belt Retractor - Vehicles With: 60/40 Split Seat (76.73.20)

Removal


1. Release the safety belt retractor cover and guide
 - Remove the 2 screws.
 - Remove the safety belt guide.
 - Remove the retractor cover.

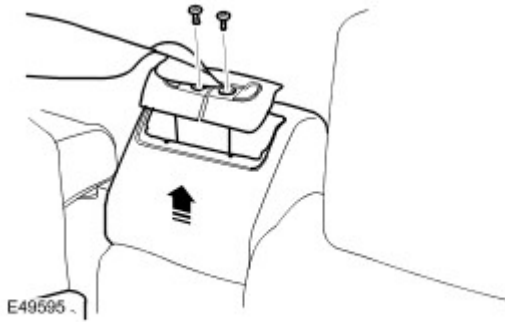

2. Remove the safety belt lower anchor.
 - Raise the seat cushion.
 - Remove and discard the nut.

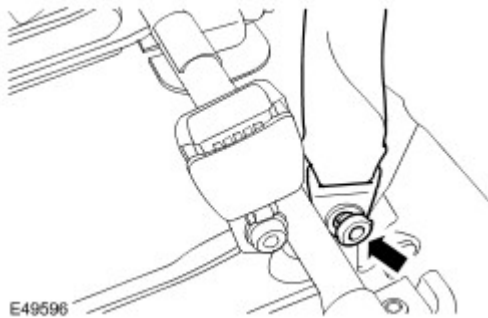

3. Remove the safety belt retractor assembly.
 - Remove and discard the Torx bolt.

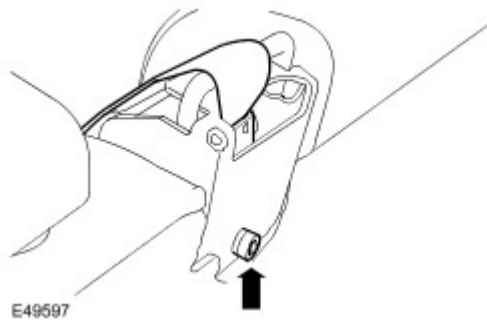

Installation

- 1 . Install the safety belt retractor assembly.
 - ▶ Tighten the new Torx bolt to 40 Nm (30 lb.ft).
- 2 . Install the safety belt guide and retractor cover.
 - ▶ Attach the safety belt guide and retractor cover.
 - ▶ Tighten the screws.
- 3 . Install the safety belt lower anchor.
 - ▶ Tighten the new nut to 40 Nm (30 lb.ft).
 - ▶ Lower the seat cushion.