




Second Row Safety Belt Retractor (76.73.23)

Removal

1. Remove the C-pillar upper trim panel. For additional information, refer to [C-Pillar Upper Trim Panel \(76.13.35\)](#) (Section 501-05)
2. Remove the C-pillar lower trim panel. For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)
3. Release the safety belt upper anchor.

➤ Remove and discard the Torx bolt.

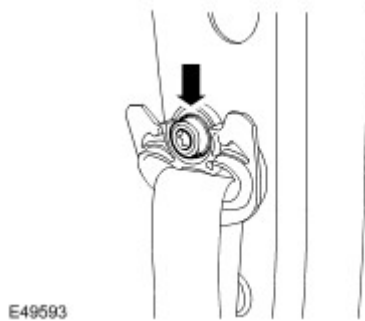

4. Remove the second row safety belt retractor.

➤ Remove and discard the Torx bolt.



Installation

1. Install the second row safety belt retractor.
➤ Tighten the Torx bolt to 40 Nm (30 lb.ft).
2. Install the safety belt upper anchor.
➤ Tighten the Torx bolt to 40 Nm (30 lb.ft).
3. Install the C-pillar lower trim panel. For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)

- 4 . Install the C-pillar upper trim panel. For additional information, refer to [C-Pillar Upper Trim Panel \(76.13.35\)](#) (Section 501-05)