





Third Row Safety Belt Retractor (76.73.28)

Removal

1. Remove the D-pillar upper trim panel. For additional information, refer to [D-Pillar Trim Panel \(76.13.30\)](#) (Section 501-05)
2. Release the safety belt upper anchor.
➤ Remove and discard the Torx bolt.

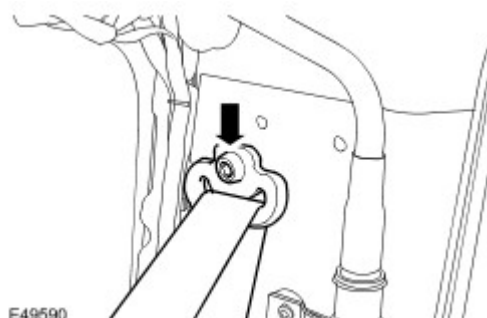

3. Remove the third row safety belt retractor.
➤ Remove and discard the Torx bolt.

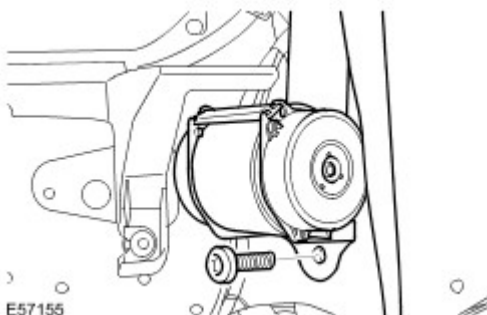

Installation

1. Install the third row safety belt retractor.
➤ Tighten the Torx bolt to 40 Nm (30 lb.ft).
2. Install the safety belt upper anchor.
➤ Tighten the Torx bolt to 40 Nm (30 lb.ft).
3. Install the D-pillar upper trim panel. For additional information, refer to [D-Pillar Trim Panel \(76.13.30\)](#) (Section 501-05)