



Driver Air Bag Module (76.74.01)

Special Service Tools



Driver air bag module remover
501-106

Removal



WARNING: It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.




WARNING: Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.

NOTE :

If the SRS component is to be replaced, the bar code of the new unit must be recorded.

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
- 3 . Remove the driver air bag module.
 - Using the special tool, release the clip.
 - Repeat the above procedure for the other side.
 - Disconnect the ground cable.
 - Release the clips and disconnect the 2 electrical connectors.

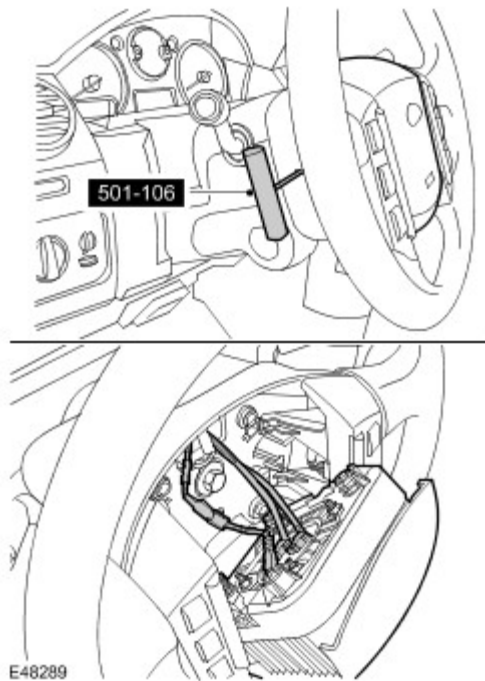

Installation

1.



WARNING: The SRS electrical connectors are unique. DO NOT force, or attempt to connect electrical connectors to the wrong sockets.

Attach the driver air bag module.

- Connect the ground cable.
- Connect the electrical connectors.

2.



WARNING: Driver air bag module installation can be confirmed by hearing 2 audible clicks, 1 for each spring. The module edges should also be flush with the steering wheel.

Install the driver air bag module.

- Align the module to the steering wheel.
- Make sure the wires are not trapped behind the module.
- Align the locating pins and springs.