



## Front Door Side Impact Sensor (76.74.25)

### Removal



**WARNING:** It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.




**WARNING:** Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.

#### NOTE :

If the SRS component is to be replaced, the bar code of the new unit must be recorded.

1. Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
2. Remove the front door trim panel. For additional information, refer to [Front Door Trim Panel \(76.34.01\)](#) (Section 501-05)
3. Remove the front door side impact sensor.
  - Disconnect the electrical connector.
  - Remove the 2 Torx bolts.

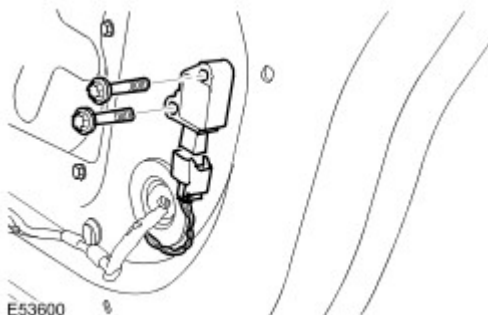

### Installation

1. Install the front door side impact sensor.
  - Tighten the Torx bolts to 8 Nm (6 lb.ft).
  - Connect the electrical connector.
2. Install the front door trim panel. For additional information, refer to [Front Door Trim Panel \(76.34.01\)](#) (Section 501-05)