



Front Impact Severity Sensor (76.74.08)

Removal



WARNING: It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.




WARNING: Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.

NOTE :

If the SRS component is to be replaced, the bar code of the new unit must be recorded.

1. Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
2. Remove the headlamp assembly. For additional information, refer to [Headlamp Assembly \(86.40.49\)](#) (Section 417-01)
3. Remove the front impact sensor.
 - Disconnect the electrical connector.
 - Remove the 2 Torx bolts.

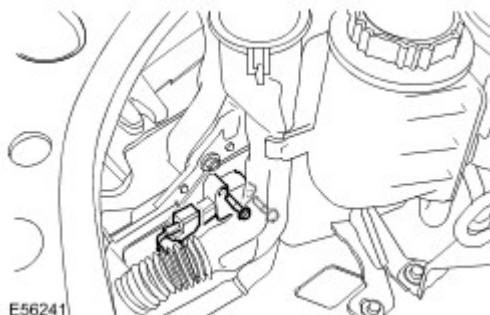

Installation

1. Install the front impact sensor.
 - Tighten the Torx bolts to 8 Nm (6 lb.ft).
 - Connect the electrical connector.
2. Install the headlamp assembly. For additional information, refer to [Headlamp Assembly \(86.40.49\)](#) (Section 417-01)