

Published : Aug 3, 2004



## Occupant Classification Sensor (76.74.76)

### Removal

#### NOTE :

The occupant classification sensor is part of the passenger seat cushion. The sensor is only fitted to NAS models.

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the front seat cushion cover. For additional information, refer to [Front Seat Cushion Cover \(78.30.01\)](#) (Section 501-10)

### Installation

- 1 . Install the front seat cushion cover. For additional information, refer to [Front Seat Cushion Cover \(78.30.01\)](#) (Section 501-10)
- 2 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 3 . Using T4, configure a new occupant classification sensor.