



Passenger Air Bag Module (76.74.02)

Removal



WARNING: It is imperative that before any work is undertaken on the SRS system, the appropriate information is read thoroughly.



WARNING: Always disconnect both battery cables before beginning work on the SRS system. Disconnect the ground cable first. Never reverse connect the battery.

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Make the SRS system safe. For additional information, refer to [Standard Workshop Practices](#) (Section 100-00)
3. Remove the instrument panel upper section. For additional information, refer to [Instrument Panel Upper Section \(76.46.04\)](#) (Section 501-12)
4. Remove the passenger air bag module.




Remove the 4 nuts.



5. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the passenger air bag module bracket.



Remove the 2 nuts.

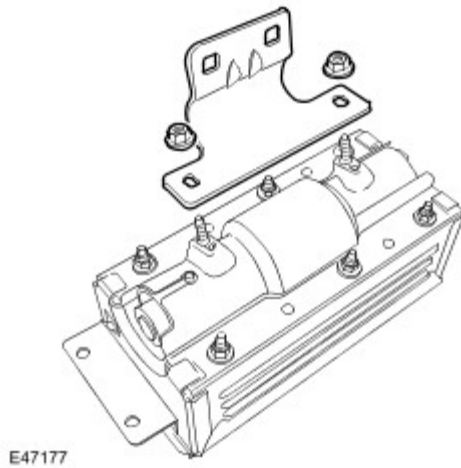

Installation

1. Install the passenger air bag module bracket.
 - ▶ Tighten the nuts to 10 Nm (7 lb.ft).
2. Install the passenger air bag module.
 - ▶ Tighten the nuts to 10 Nm (7 lb.ft).
3. Install the instrument panel upper section. For additional information, refer to [Instrument Panel Upper Section \(76.46.04\)](#) (Section 501-12)